



MODEL 21FL84

IMPORTANT SERVICE SAFETY PRECAUTION

■ Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.
To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.
It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter.
The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value —no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.
Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION (Continued)

BEFORE RETURNING THE RECEIVER

(Fire & Shock Hazard)


Before returning the receiver to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.
 - Plug the AC cord directly into a 110~220 volt AC outlet, (Do not use an isolation transformer for this test).
 - Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15 μ F capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
 - Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.

- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.

All checks must be repeated with the AC line cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)

Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

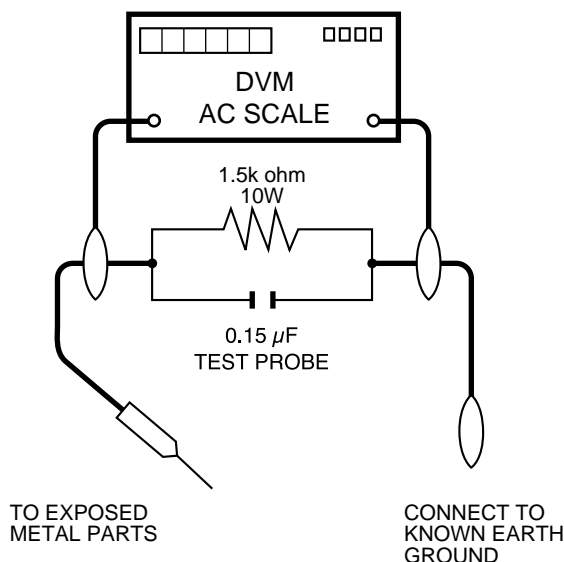

SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by " \triangle " and shaded areas in the Replacement Parts Lists and Schematic Diagrams.

For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

LOCATION OF USER'S CONTROL

Front Panel

POWER

Press → On.
Press again → Off.

SENSOR AREA FOR
REMOTE CONTROL

MENU

Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

VOLUME UP/DOWN

(+) Increases sound.
(-) Decreases sound.

CHANNEL UP/DOWN

(▲) Selects next higher channel.
(▼) Selects next lower channel.

VIDEO IN 2 L-AUDIO-R

(INSIDE DOOR)

Basic Remote Control Functions

POWER

Press → On.
Press again → Off.

REMOTE KEYPAD

Accesses any channel from keypad.

FLASH BACK

Returns to previous channel.

VOLUME UP/DOWN

(+) Increases sound.
(-) Decreases sound.
• In menu mode, changes or selects the TV adjustments.

MUTE

Press Mutes sound.
Press again Restores sound.
• CLOSED CAPTION appears when sound is muted.

Infrared Transmitter Window

INPUT

Press → Switch to external video input mode.
Press again → Switch to TV mode.

CHANNEL UP/DOWN


(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Moves the "◆" mark of the MENU screen.

MENU

Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

DISPL AY

Press → Displays receiving channel for 4 seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

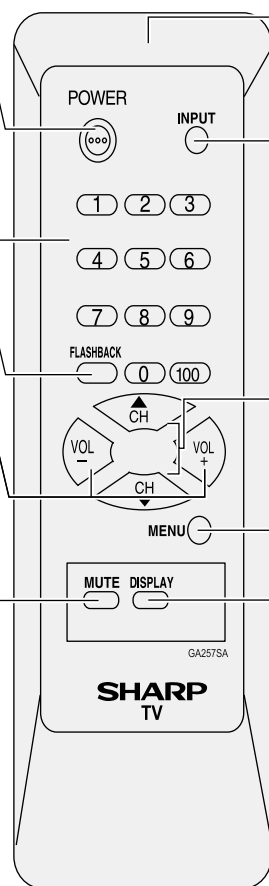

Note:

- The above shaded buttons on the Remote Control glow in the dark. To use the glow-in-the-dark display on the remote control, place it under a fluorescent light or other lighting.
- The phosphorescent material contains no radioactive or toxic material, so it is safe to use.
- The degree of illumination will vary depending on the strength of lighting used.
- The degree of illumination will decrease with time and depending on the temperature.
- The time needed to charge the phosphorescent display will vary depending on the surrounding lighting.
- Sunlight and fluorescent lighting are the most effective when charging the display.

INSTALLATION AND SERVICE INSTRUCTIONS

- Note:** (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
 (2) Before performing adjustments, the TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 3.15A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 110~220V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to P603 pin3 and make sure that the voltmeter reads $20 \pm 1.1V$.
5. Apply external 27V DC at P603 pin3 by using an external DC supply, TV must be shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between P603 pin1 and P603 pin2. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:


1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 110~220V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Enter the service mode and set Y-mute ON by using Service R/C.
4. The voltage should be approximately 28.7kV (at zero beam).

If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

SERVICE MODE

Service Mode Overview

1. Service mode is entered by SERVICE key input or CH-UP +VOL-DOWN input during reset.
2. Service mode is cleared by entering SERVICE key command during service mode.
3. If key input port (SERVICE) input is LOW, then it is in service mode.
4. During key input port (SERVICE) input is LOW, clearing service mode by key input SERVICE is disabled.
5. Service mode can be switched to 4 modes as follows by key input MENU;

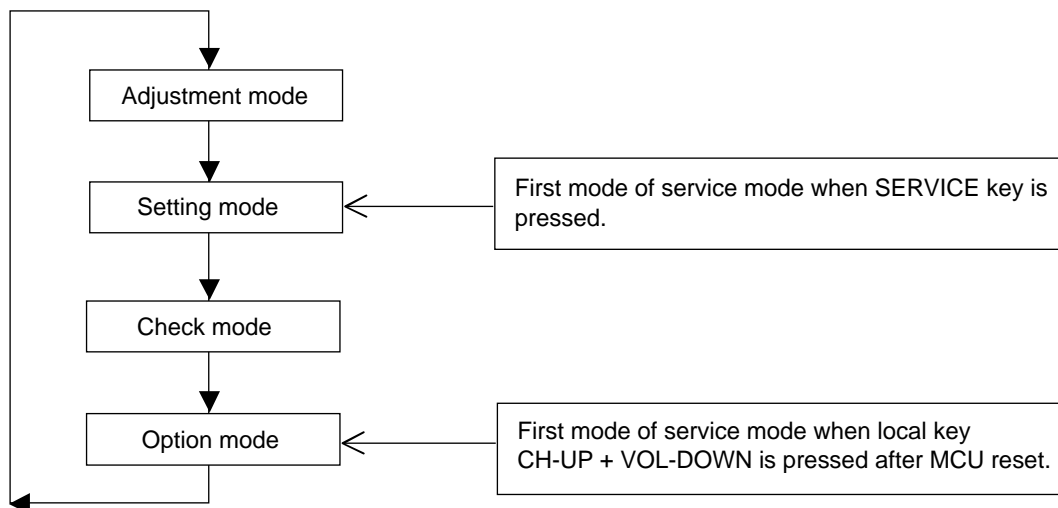

6. AFT processing is disabled during service mode. PLL setting data is set to fo data.
7. All user data are set to default during service mode. FAO and SPEAKER user settings are off and on respectively in service mode. Energy Save is off.
8. Sleep timer, View timer, on timer and off timer are inactivated in Service mode.
9. Sound is muting in service mode except at Adjustment Items V20, M01, M03, M04, M05, and M06.

Adjustment Mode Items

No.	Item Name	IC	Register	Range	Default
V01	SUB-PICTURE	1 Chip	CONTRAST	0~127	127
V02	SUB-TINT	1 Chip	TINT	0~127	64
V03	SUB-COLOR	1 Chip	COLOR	0~127	64
V04	SUB-BRIGHT	1 Chip	BRIGHT	0~255	128
V05	SUB-SHARP	1 Chip	VIDEO-TONE	0~63	32
V06	V-SHIFT	1 Chip	V-SHIFT	0~7	4
V07	H-SHIFT	1 Chip	H-PHASE	0~31	16
V08	RF-AGC	1 Chip	RF-DELAY	0~127	127
V09	V-SIZE	1 Chip	V-SIZE	0~63	32
V10	PIF-VCO	1 Chip	VIF-VCO	0~63	32
V11	R-CUTOFF	1 Chip	R-CUTOFF	0~255	64
V12	G-CUTOFF	1 Chip	G-CUTOFF	0~255	64
V13	B-CUTOFF	1 Chip	B-CUTOFF	0~255	64
V14	R-DRIVE	1 Chip	R-DRIVE	0~127	64
V15	B-DRIVE	1 Chip	B-DRIVE	0~127	64
V16	SUB-COLOR(YUV)	1 Chip	COLOR	0~127	64
V17	SUB-TINT(YUV)	1 Chip	BASEBAND-TINT	0~127	64
V18	CC-POS	MICON	CC-POS	0~255	32
V19	SCREEN CUT OFF	1 Chip	CUT OFF	0~2	0
V20	SUB-VOL	1 Chip	A-ATT	0~127	127
V21	H-VCO	1 Chip	H-VCO	0~7	4
M01	MTS-ATT	MTS	ATT (MTS)	0~15	16
M02	MTS-VCO	MTS	VCO (MTS)	0~63	32
M03	MTS-FILTER	MTS	FILTER (MTS)	0~63	28
M04	MTS-WIDEBAND	MTS	WIDEBAND (MTS)	0~63	27
M05	MTS-SPECTRAL	MTS	SPECTRAL (MTS)	0~63	32
M06	SUB-VOL	MTS	VOL (MTS)	0~63	63

■ SELF ADJUSTMENT

H-VCO

1. When there is H-VCO self-adjustment key input for adjustment item H-VCO, self-adjustment is performed.
2. H-FREE(1chip) is set to 1.
3. H-OUT is set by intelligent monitor output.
4. IM input is set as TIM input.
5. H-VCO(1chip) data is changed so that the number of input pulse is 125 inside 8ms interval.
6. When adjustment completed, OSD display and H-VCO self-adjustment status data of EEPROM are updated.
7. H-FREE(1chip), intelligent monitor output and IM input mode are recovered.

RF-AGC

1. When there is RF-AGC self-adjustment key input for adjustment item RF-AGC, self-adjustment is performed.
2. AGC-OUT is set by intelligent monitor output.
3. IM input is set as AD input.
4. By decreasing RF-AGC (1chip) data from current RF-AGC adjustment value to 0, AFT input voltage becomes the maximum setting value.
5. Increase RF-AGC(1chip) data, when AFT input voltage is at (max. 0.3V) point, adjustment is completed.
6. When adjustment completed, OSD display and RF-AGC self-adjustment status data of EEPROM are updated.
7. Intelligent monitor output and IM input mode are recovered.

PIF-VCO

1. When there is PIF-VCO self-adjustment key input for adjustment item PIF-VCO, self-adjustment is performed.
2. VIF-DEF(1chip) is set to 1.
3. AFC is set by intelligent monitor output.
4. IM input is set as AD input.
5. VIF-VCO(1chip) data is changed so that input voltage becomes 2.5V.
6. When adjustment completed, OSD display and PIF-VCO self-adjustment status data of EEPROM are updated.
7. VIF-DEF(1chip), intelligent monitor output and IM input mode are recovered.

Setting Mode Items

No.	Item Name	IC	Register	Range	Default
F01	VIDEO TONE -GAIN (TV)	1 Chips	V-TONE	0/1	0
F02	VIDEO TONE -GAIN (AV)	1 Chips	V-TONE	0/1	0
F03	VIDEO TONE -GAIN (S-AV)	1 Chips	V-TONE	0/1	0
F04	VIDEO TONE -GAIN(YUV)	1 Chips	V-TONE	0/1	0
F05	ABCL	1 Chips	ABCL	0/1	0
F06	BS	1 Chips	BS-OFF	0/1	0
F07	ABCL-G	1 Chips	ABCL-G	0/1	0
F08	SHP-AV	OFFSET	VIDEO-TONE(OFFSET)	-16~+16	0
F09	SHP-SAV	OFFSET	VIDEO-TONE(OFFSET)	-16~+16	0
F10	SHP-YUV	OFFSET	VIDEO-TONE(OFFSET)	-16~+16	0
F11	RGB-CLIP	1 Chips	EXTRGB-CLIP	0/1	0
F12	E-SAVE	OFFSET	CONTRAST(OFFSET)	0~63	30
F13	FAO-VOL	1 Chips	A-ATT	0~127	120
F14	PIF-G	1 Chips	VIF-GAIN	0~7	4
F15	Y-DELAY(TV)	1 Chips	Y-DELAY	0~7	0
F16	Y-DELAY(AV)	1 Chips	Y-DELAY	0~7	0
F17	Y-DELAY(SAV)	1 Chips	Y-DELAY	0~7	0
F18	Y-DELAY(YUV)	1 Chips	Y-DELAY	0~7	0
F19	TINT-AV	OFFSET	TINT(OFFSET)	-32~+32	0
F20	TINT-SAV	OFFSET	TINT(OFFSET)	-32~+32	0
F21	COL-AV	OFFSET	COLOR(OFFSET)	-32~+32	0
F22	COL-SAV	OFFSET	COLOR(OFFSET)	-32~+32	0
F23	R-DRI(R2)	OFFSET	R-DRI(OFFSET)	-32~+32	0
F24	R-DRI(R)	OFFSET	R-DRI(OFFSET)	-32~+32	0
F25	R-DRI(B)	OFFSET	R-DRI(OFFSET)	-32~+32	0
F26	B-DRI(R2)	OFFSET	B-DRI(OFFSET)	-32~+32	0
F27	B-DRI(R)	OFFSET	B-DRI(OFFSET)	-32~+32	0
F28	B-DRI(B)	OFFSET	B-DRI(OFFSET)	-32~+32	0
F29	V-FREE	1 Chips	V-FREE	0/1	0
F30	GAMMA	1 Chips	GAMMA	0~3	0
F31	TRAP(TV)	1 Chips	TRAP-FINE	0~3	2
F32	TRAP(AV)	1 Chips	TRAP-FINE	0~3	2
F33	H-FREE	1 Chips	H-FREE	0/1	0
F34	1W(TV)	1 Chips	V.WINDOW	0/1	0
F35	1W(AV)	1 Chips	V.WINDOW	0/1	0
F36	YLPF	1 Chips	YSW-LPF	0/1	1
F37	BS-D	1 Chips	BS-DISCHARGE	0~3	0
F38	BS-C	1 Chips	BS-CHARGE	0~3	0
F39	SL(TV)	1 Chips	S-SLICE DOWN	0~3	0
F40	SL(AV)	1 Chips	S-SLICE DOWN	0~3	0
F41	SL(SAV)	1 Chips	S-SLICE DOWN	0~3	0
F42	SL(YUV)	1 Chips	S-SLICE DOWN	0~3	0
F43	AFC2	1 Chips	AFC2-G	0/1	0
F44	VD(TV)	1 Chips	VSYNC-DET	0/1	0
F45	VD(AV)	1 Chips	VSYNC-DET	0/1	0
F46	AS(TV)	1 Chips	AUTO-SLICE	0/1	0
F47	AS(AV)	1 Chips	AUTO-SLICE	0/1	0
F48	AS(SAV)	1 Chips	AUTO-SLICE	0/1	0
F49	AS(YUV)	1 Chips	AUTO-SLICE	0/1	0
F50	FBP(TV)	1 Chips	FBP VTH	0/1	0
F51	FBP(AV)	1 Chips	FBP VTH	0/1	0
F52	FBP(SAV)	1 Chips	FBP VTH	0/1	0
F53	FBP(YUV)	1 Chips	FBP VTH	0/1	0
F54	C.CLIP LEVEL	1 Chips	C.CLIP LEVEL	0/1	0

Setting Mode Items (Continued)

No.	Item Name	IC	Register	Range	Default
F55	PSW	MTS	PSW	0/1	0
F56	FAO-VOL	MTS	VOL	0~63	60
F57	CP	PLL	CHARGE PUMP	0/1	0
F58	CC LEVEL	MICON	CC LEVEL	0/1	0
F59	OSD POS	MICON	OSD POS	0/1	0
F60	OFFSET-ADJ-COL	1 Chips	COLOR	-32~+32	0
F61	OFFSET-ADJ-TINT	1 Chips	TINT	-32~+32	0
F62	OFFSET-ADJ-TINT-YUV	1 Chips	BASEBAND-TINT	-32~+32	0
F63	TIMER4-LOW SPEED	1 Chips	TIMER4 VALUE	0~225	50
F64	TIMER4-HIGH SPEED	1 Chips	TIMER4 VALUE	0~225	125
F65	R-CUT-YUV	1 Chips	R-CUT(OFFSET)	-63~+63	0
F66	G-CUT-YUV	1 Chips	G-CUT(OFFSET)	-63~+63	0
F67	B-CUT-YUV	1 Chips	B-CUT(OFFSET)	-63~+63	0
F68	R-DRI-YUV	1 Chips	R-DRI(OFFSET)	-63~+63	0
F69	B-DRI-YUV	1 Chips	B-DRI(OFFSET)	-63~+63	0
F70	CLOCK-ADJ	1 Chips		0~25	25

Option Mode Items

No	OPTION FUNCTION	0	1	Default Data
001	DEMO	Without DEMO	With DEMO	1
002	DOWNLOAD	Without V-CHIP OP	With V-CHIP OP	0
003	V-CHIP	Without V-CHIP	With V-CHIP	0
004	SPEAKER	Without SPEAKER	With SPEAKER	1
005	FAO	Without FAO	With FAO	1
006	P.PREF	Without P.PREF	With P.PREF	1
007	UNIV+	Without UNIV+	With UNIV+	1
008	VIEW TIMER	Without VIEW TIMER	With VIEW TIMER	1
009	EZ-SETUP	EZ-SETUP	AUTO PRESET	0
010	PON-CH	Without POWER-ON	With POWER-ON	0
011	FAV-COL	FAV-COL	COL-TEMP	1
012	COMPONENT	Without COMPONENT	With COMPONENT	1
013	AV	Without AV	With AV	1
014	AV2	AV1 system	AV2 system	1
015	MTS	Without MTS	With MTS	1
016	TONE-CTRL	Without S-ADJ	With S-ADJ	1
017	AUTO-OFF	Without AUTO-OFF	With AUTO-OFF	1
018	INIT-LANG	ENGLISH	SPANISH	1
019	SETUP-FLAG	NO SET UP	AUTO SET UP	1
020	AV-FR	"0"=NO AV "1"=REAR "2"=FRONT "3"=REAR & FRONT		3
021	AV3/S-IN	Without AV3/S-IN	With AV3/S-IN	0
022	COMB	Without COMB	With COMB	0
023	AUTO-INPUT	Without AUTO-INPUT	With AUTO-INPUT	1
024	CLOCK	Without CLOCK	With CLOCK	1
025	LED	SEMEX MODEL	SPC MODEL	0
026	FLAT	Not FLAT MODEL	FLAT MODEL	1
027	BASS BOOST	Without BASS BOOST	With BASS BOOST	0
028	DSE	Without DSE	With DSE	0
029	SRS	Without SRS	With SRS	0
030	WHITE-OUT	Without WHITE-OUT	With WHITE-OUT	1

Check Mode

Micron mask version, software version and ROM correction function status are displayed in check mode.

ADJUSTMENT METHOD

Caution: to get into the service mode, one of the ways is press direct key for service items. the other ways is short the main chassis JA301 and JA410

There is three stage of Service Mode data

First stage data from V01 ~ M06

to go into second stage of service mode data, press MENU key

Second stage data from F01 ~ F70

to go into third stage of service mode data, press MENU key

Third stage data from 001 ~ 030

Below is the contents of these data

First Stage

Data	Service Mode	Function	Range	Default Data
V01	SUB-PICTURE	CONTRAST	0~127	127
V02	SUB-TINT	TINT	0~127	64
V03	SUB-COLOR	COLOR	0~127	64
V04	SUB-BRIGHT	BRIGHT	0~255	128
V05	SUB-SHARP	VIDEO-TONE	0~63	32
V06	V-SHIFT	V-SHIFT	0~7	4
V07	H-SHIFT	H-PHASE	0~31	16
V08	RF-AGC	RF-DELAY	0~127	127
V09	V-SIZE	V-SIZE	0~63	32
V10	PIF-VCO	VIF-VCO	0~63	32
V11	R-CUTOFF	R-CUTOFF	0~255	127
V12	G-CUTOFF	G-CUTOFF	0~255	127
V13	B-CUTOFF	B-CUTOFF	0~255	127
V14	R-DRIVE	R-DRIVE	0~127	64
V15	B-DRIVE	B-DRIVE	0~127	64
V16	SUB-COLOR(YUV)	COLOR	0~127	64
V17	SUB-TINT(YUV)	BASEBAND-TINT	0~127	64
V18	CC-POS	CC-POS	0~255	32
V19	SCREEN CUT OFF	CUT OFF	0~2	0
V20	SUB-VOL	A-ATT	0~127	127
V21	H-VCO	H-VCO	0~7	4
M01	MTS-ATT	ATT (MTS)	0~15	10
M02	MTS-VCO	VCO (MTS)	0~63	32
M03	MTS-FILTER	FILTER (MTS)	0~63	28
M04	MTS-WIDEBAND	WIDEBAND (MTS)	0~63	27
M05	MTS-SPECTRAL	SPECTRAL (MTS)	0~63	32
M06	SUB-VOL	VOL (MTS)	0~63	63

Auto Adjustment Item

1. H-VCO
2. RF-AGC
3. PIF-VCO

Second Stage

Data	Service Mode	Function	Range	Default Data
F01	VIDEO TONE -GAIN (TV)	V-TONE	0/1	0
F02	VIDEO TONE -GAIN (AV)	V-TONE	0/1	0
F03	VIDEO TONE -GAIN (S-AV)	V-TONE	0/1	0
F04	VIDEO TONE -GAIN(YUV)	V-TONE	0/1	0
F05	ABCL	ABCL	0/1	0
F06	BS	BS-OFF	0/1	0
F07	ABCL-G	ABCL-G	0/1	0
F08	SHP-AV	VIDEO-TONE(OFFSET)	-16~+16	0
F09	SHP-SAV	VIDEO-TONE(OFFSET)	-16~+16	0
F10	SHP-YUV	VIDEO-TONE(OFFSET)	-16~+16	0
F11	RGB-CLIP	EXTRGB-CLIP	0/1	0
F12	E-SAVE	CONTRAST(OFFSET)	0~63	30
F13	FAO-VOL	A-ATT	0~127	120
F14	PIF-G	VIF-GAIN	0~7	4
F15	Y-DELAY(TV)	Y-DELAY	0~7	0
F16	Y-DELAY(AV)	Y-DELAY	0~7	0
F17	Y-DELAY(SAV)	Y-DELAY	0~7	0
F18	Y-DELAY(YUV)	Y-DELAY	0~7	0
F19	TINT-AV	TINT(OFFSET)	-32~+32	0
F20	TINT-SAV	TINT(OFFSET)	-32~+32	0
F21	COL-AV	COLOR(OFFSET)	-32~+32	0
F22	COL-SAV	COLOR(OFFSET)	-32~+32	0
F23	R-DRI(R2)	R-DRI(OFFSET)	-32~+32	0
F24	R-DRI(R)	R-DRI(OFFSET)	-32~+32	0
F25	R-DRI(B)	R-DRI(OFFSET)	-32~+32	0
F26	B-DRI(R2)	B-DRI(OFFSET)	-32~+32	0
F27	B-DRI(R)	B-DRI(OFFSET)	-32~+32	0
F28	B-DRI(B)	B-DRI(OFFSET)	-32~+32	0
F29	V-FREE	V-FREE	0/1	0
F30	GAMMA	GAMMA	0~3	0
F31	TRAP(TV)	TRAP-FINE	0~3	2
F32	TRAP(AV)	TRAP-FINE	0~3	2
F33	H-FREE	H-FREE	0/1	0
F34	1W(TV)	V.WINDOW	0/1	0
F35	1W(AV)	V.WINDOW	0/1	0
F36	YLPF	YSW-LPF	0/1	1
F37	BS-D	BS-DISCHARGE	0~3	0
F38	BS-C	BS-CHARGE	0~3	0
F39	SL(TV)	S-SLICE DOWN	0~3	0
F40	SL(AV)	S-SLICE DOWN	0~3	0
F41	SL(SAV)	S-SLICE DOWN	0~3	0
F42	SL(YUV)	S-SLICE DOWN	0~3	0
F43	AFC2	AFC2-G	0/1	0
F44	VD(TV)	VSYNC-DET	0/1	0
F45	VD(AV)	VSYNC-DET	0/1	0
F46	AS(TV)	AUTO-SLICE	0/1	0
F47	AS(AV)	AUTO-SLICE	0/1	0
F48	AS(SAV)	AUTO-SLICE	0/1	0
F49	AS(YUV)	AUTO-SLICE	0/1	0
F50	FBP(TV)	FBP VTH	0/1	0
F51	FBP(AV)	FBP VTH	0/1	0
F52	FBP(SAV)	FBP VTH	0/1	0
F53	FBP(YUV)	FBP VTH	0/1	0
F54	C.CLIP LEVEL	C.CLIP LEVEL	0/1	0
F55	PSW	PSW	0/1	0
F56	FAO-VOL	VOL	0~63	60

Second Stage (Continued)


Data	Service Mode	Function	Range	Default Data
F57	CP	CHARGE PUMP	0/1	01
F58	CC LEVEL	CC LEVEL	0/1	0
F59	OSD POS	OSD POS	0/1	0
F60	OFFSET-ADJ-COL	COLOR	-32~+32	+10
F61	OFFSET-ADJ-TINT	TINT	-32~+32	+8
F62	OFFSET-ADJ-TINT-YUV	BASEBAND-TINT	-32~+32	-12
F63	TIMER4-LOW SPEED	TIMER4 VALUE	0~225	50
F64	TIMER4-HIGH SPEED	TIMER4 VALUE	0~225	125
F65	R-CUT-YUV	R-CUT(OFFSET)	-63~+63	0
F66	G-CUT-YUV	G-CUT(OFFSET)	-63~+63	+36
F67	B-CUT-YUV	B-CUT(OFFSET)	-63~+63	+2
F68	R-DRI-YUV	R-DRI(OFFSET)	-63~+63	0
F69	B-DRI-YUV	B-DRI(OFFSET)	-63~+63	0
F70	CLOCK-ADJ		0~25	25


Third Stage


Data	OPTION FUNCTION	DATA = "0"	DATA = "1"	Default Data
001	DEMO	DEMO DISABLE	ENABLE	1
002	DOWNLOAD	V-CHIP OP DISABLE	ENABLE	0
003	V-CHIP	V-CHIP DISABLE	ENABLE	0
004	SPEAKER	SPEAKER DISABLE	ENABLE	0
005	FAO	FAO DISABLE	ENABLE	0
006	P.PREF	P.PREF DISABLE	ENABLE	0
007	UNIV+	UNIV+ DISABLE	ENABLE	0
008	VIEW TIMER	VIEW TIMER DISABLE	ENABLE	1
009	EZ-SETUP	EZ-SETUP	AUTO PRESET	0
010	* PON-CH	POWER-ON DISABLE	ENABLE	0
011	FAV-COL	FAV-COL	COL-TEMP	1
012	COMPONENT	COMPONENT DISABLE	ENABLE	0
013	AV	AV DISABLE	ENABLE	1
014	AV2	AV1	AV2	1
015	MTS	MTS DISABLE	ENABLE	0
016	TONE-CTRL	S-ADJ DISABLE	ENABLE	0
017	AUTO-OFF	AUTO-OFF DISABLE	ENABLE	1
018	INIT-LANG	ENGLISH	SPANISH	1
019	SETUP-FLAG	NO SET UP	AUTO SET UP	1
020	AV-FR	"0"=NO AV "1"=REAR "2"=FRONT "3"=REAR & FRONT		3
021	AV3/S-IN	AV3/S-IN DISABLE	ENABLE	0
022	COMB	COMB DISABLE	ENABLE	0
023	AUTO-INPUT	AUTO-INPUT DISABLE	ENABLE	1
024	CLOCK	CLOCK DISABLE	ENABLE	1
025	LED	SEMEX MODEL	SPC MODEL	0
026	FLAT	FLAT DISABLE	ENABLE	1
027	BASS BOOST	BASS BOOST DISABLE	ENABLE	0
028	DSE	DSE DISABLE	ENABLE	0
029	SRS	SRS DISABLE	ENABLE	0
030	WHITE-OUT	WHITE-OUT DISABLE	ENABLE	1

*POWER ON BY CH-UP/CH-DOWN KEY

CHASSIS LAYOUT

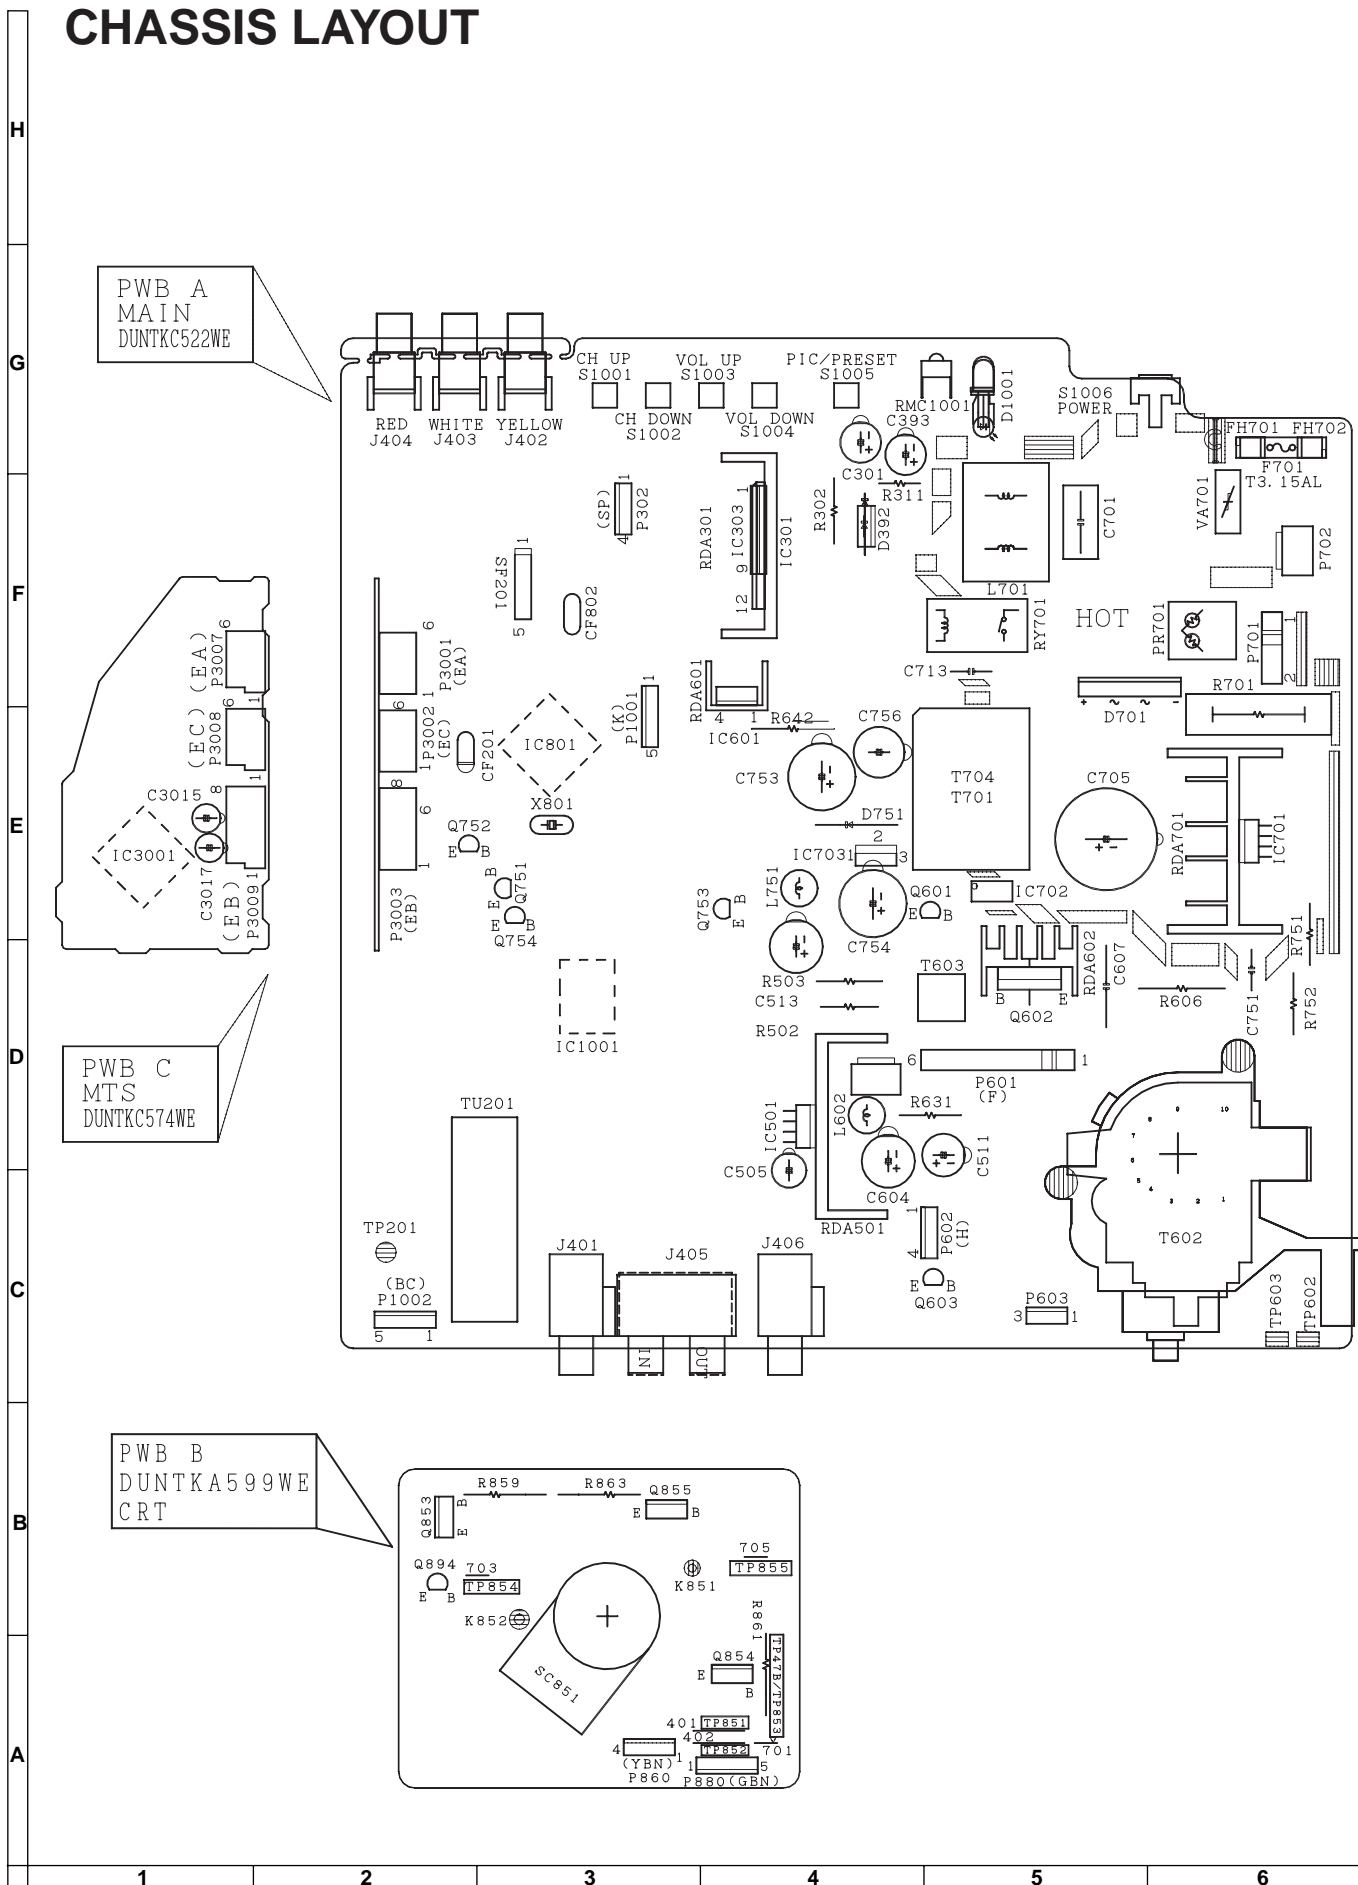



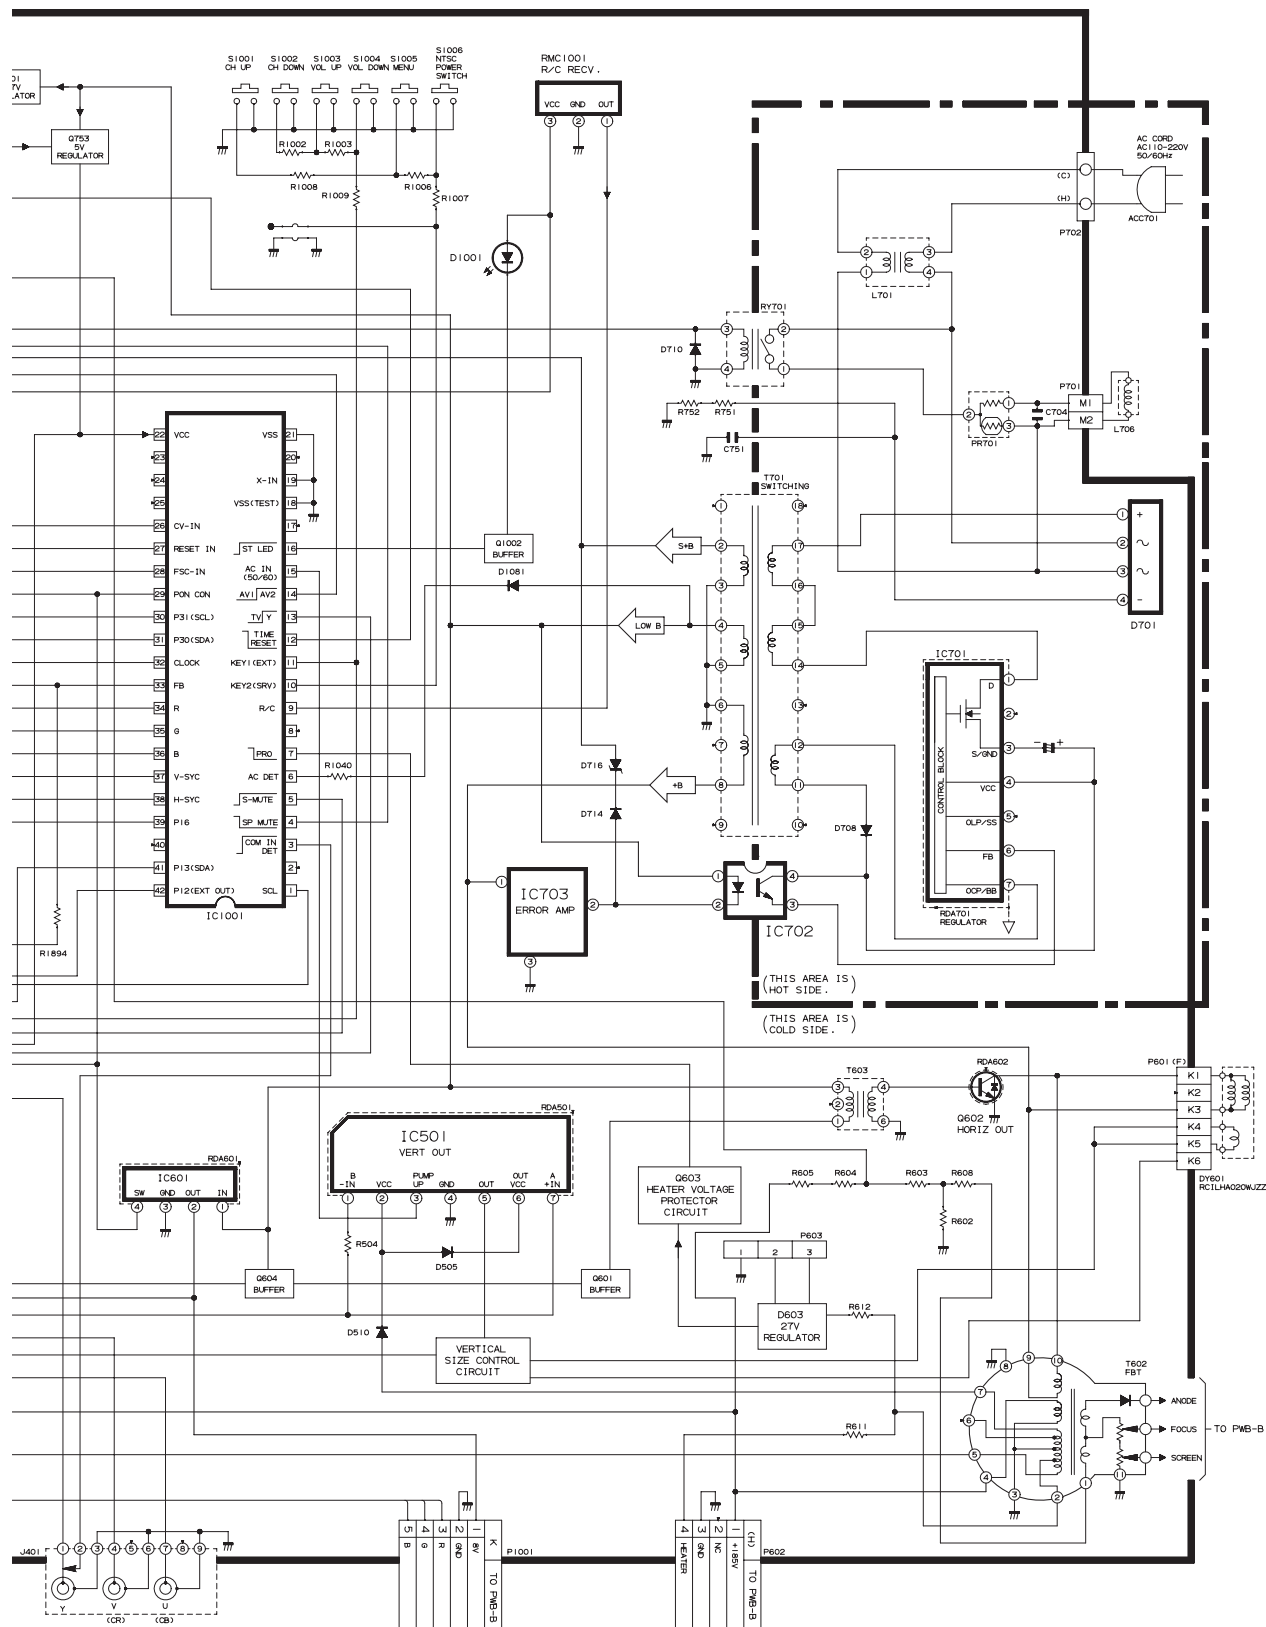

10

11

12

13

14

15


16

17

18

19

CRT BLOCK DIAGRAM

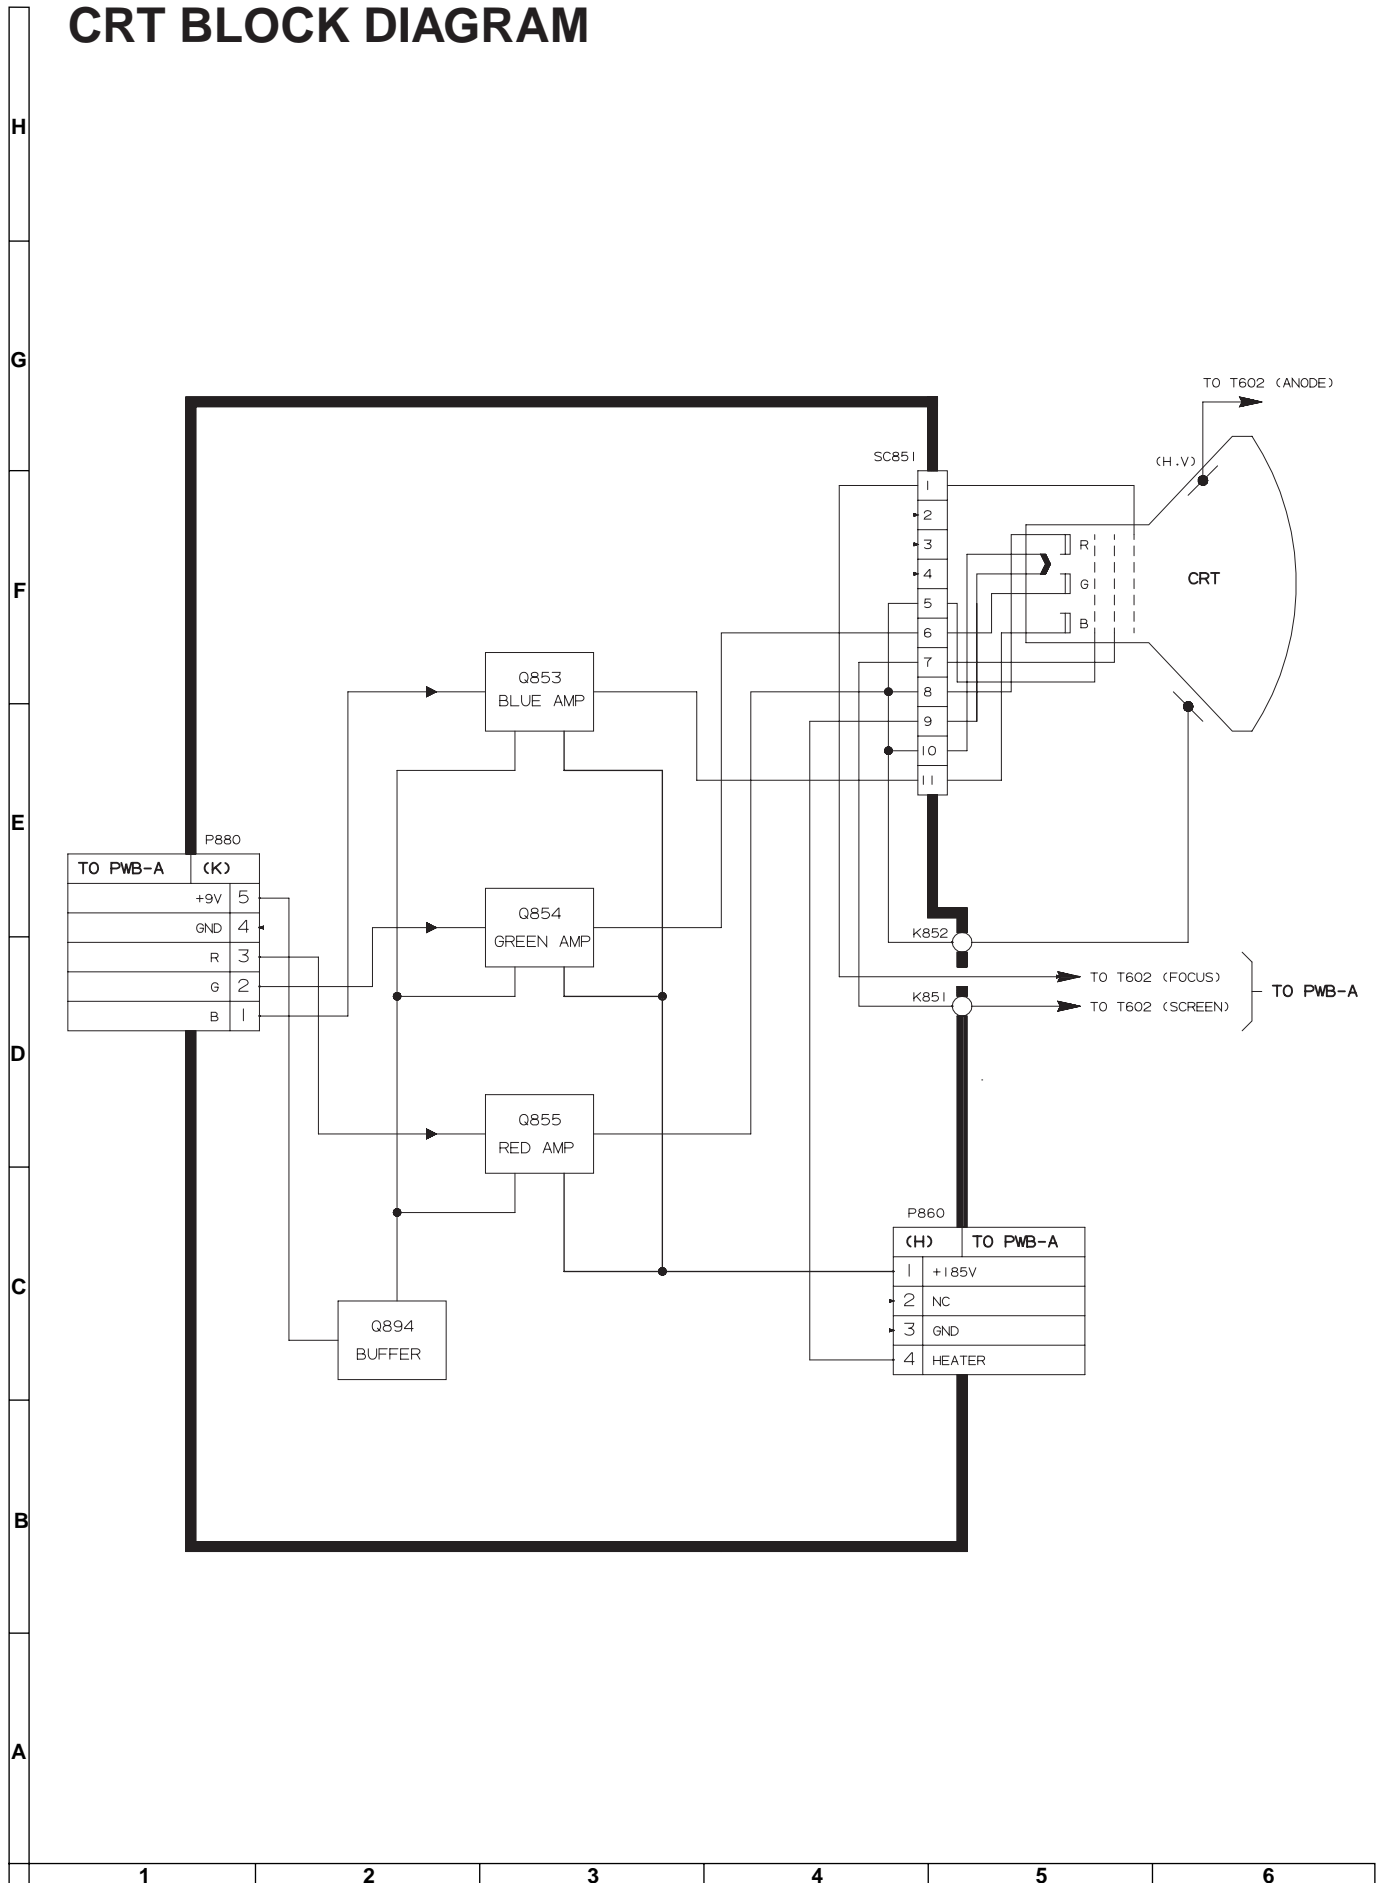

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTES:

1. The unit of resistance "ohm" is omitted.
($K=k\Omega=1000\Omega$, $M=M\Omega$)
2. All resistors are 1/16 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted.
($P=pF=\mu\mu F$)
4. (G) indicates $\pm 2\%$ tolerance may be used.
5. $\overline{\text{---}}$ indicates line isolated ground.

VOLTAGE MEASUREMENT CONDITIONS:

1. All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.
2. All voltages measured with 1000 μ V B & W or Color signal.

WAVEFORM MEASUREMENT CONDITIONS:

1. Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.
2. \odot indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)


\triangle AND SHADED () COMPONENTS = SAFETY RELATED PARTS.

\blacktriangle MARK= X-RAY RELATED PARTS.


DRGANNES MARQUES \triangle ET HACHRES () :
PIECES RELATIVES A LA SECURITE.
MARQUE \blacktriangle : PIECS RELATIVE AUX RAYONS X.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

WAVEFORMS

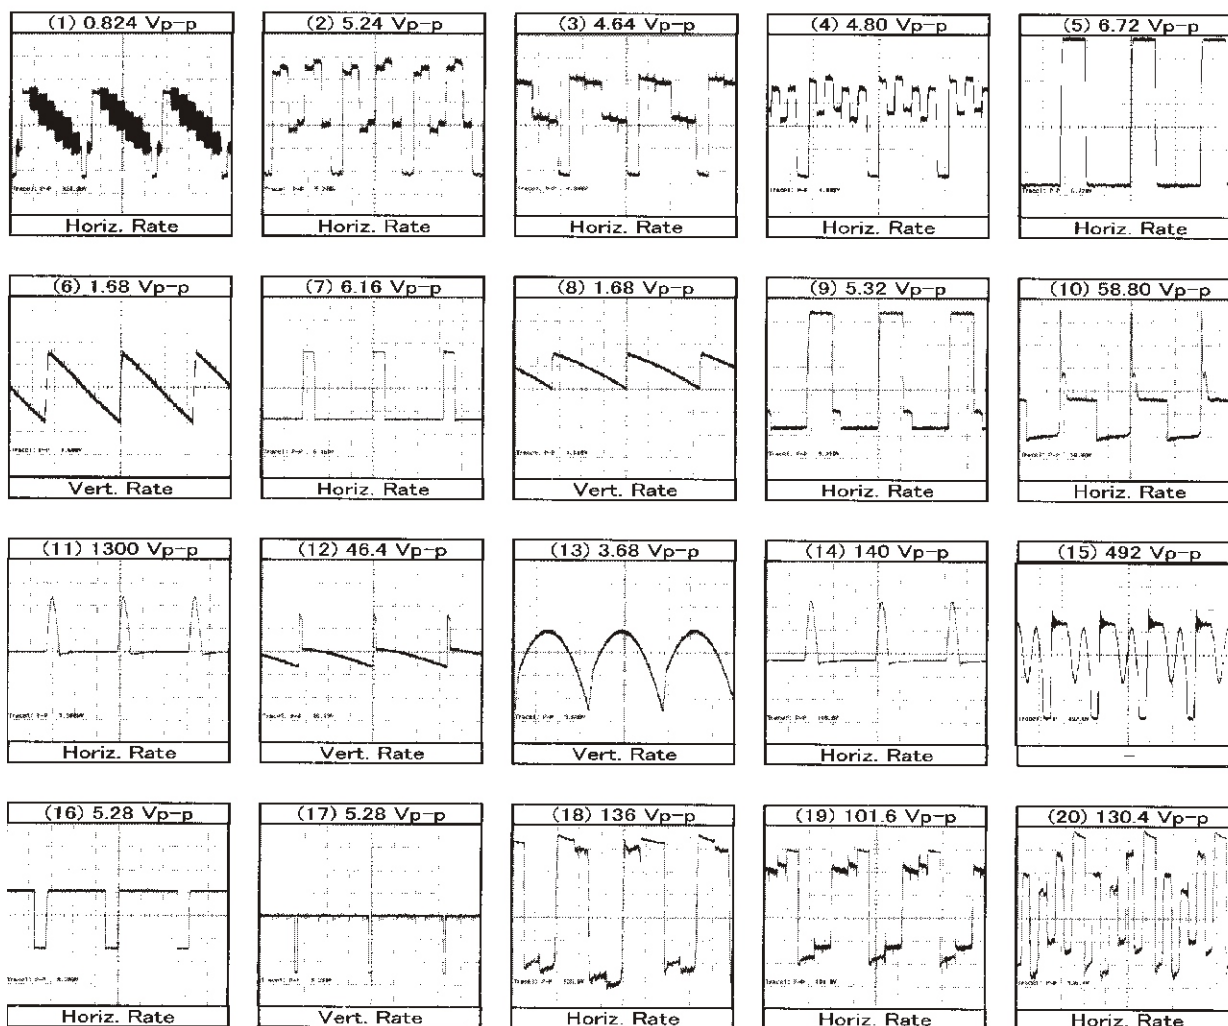


SCHEMATIC DIAGRAM: MAIN-1 Unit

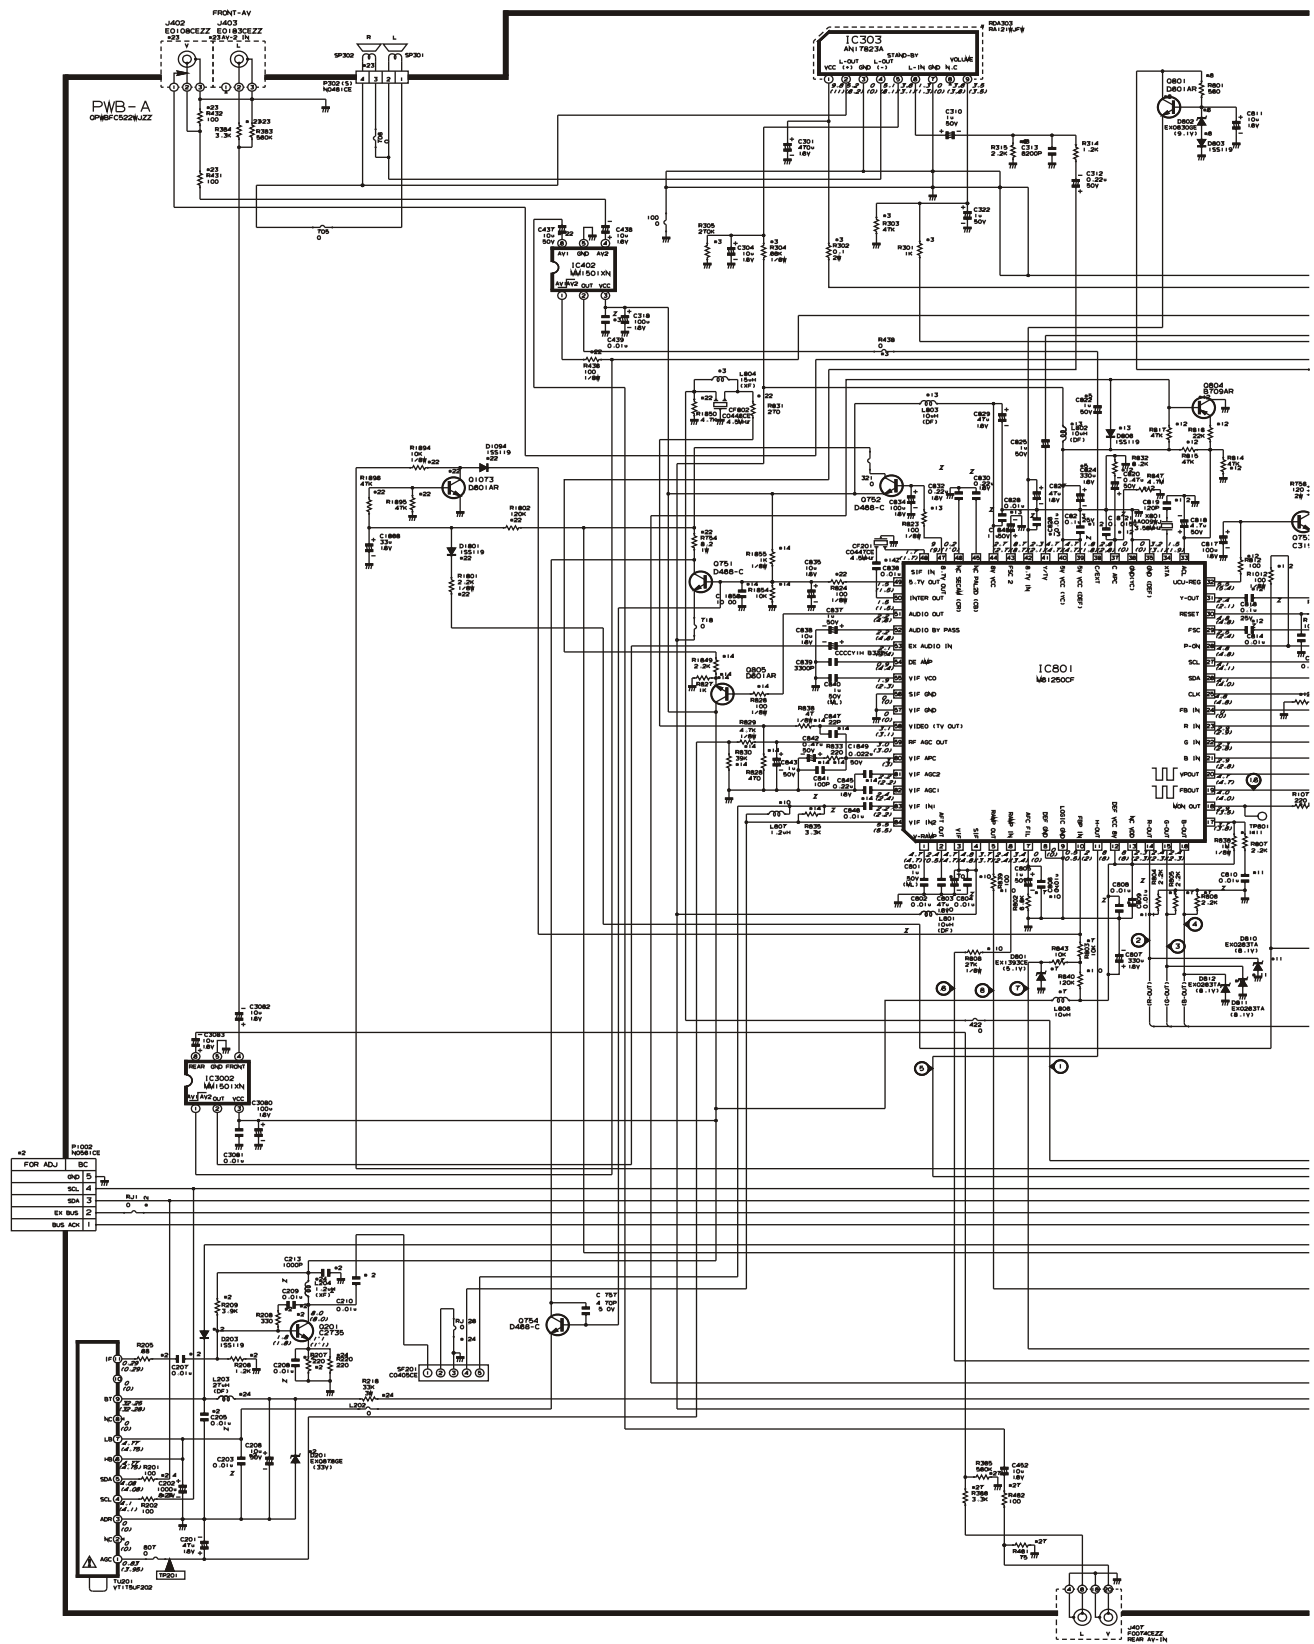

MAIN


▲ AND SHADED COMPONENTS
▲ MARK = X-RAY RELATED PARTS.

NOTE: 1. THE UNIT OF RESISTANCE "OHM" IS OMITTED.
(OH=1000 OHMS, MEG=1000000).
2. ALL RESISTORS ARE 1/8W WATT UNLESS OTHERWISE NOTED.
3. UNIT OF ALL CAPACITORS ARE P WITH PREFIX SYMBOL.
(u, P, ETC.).

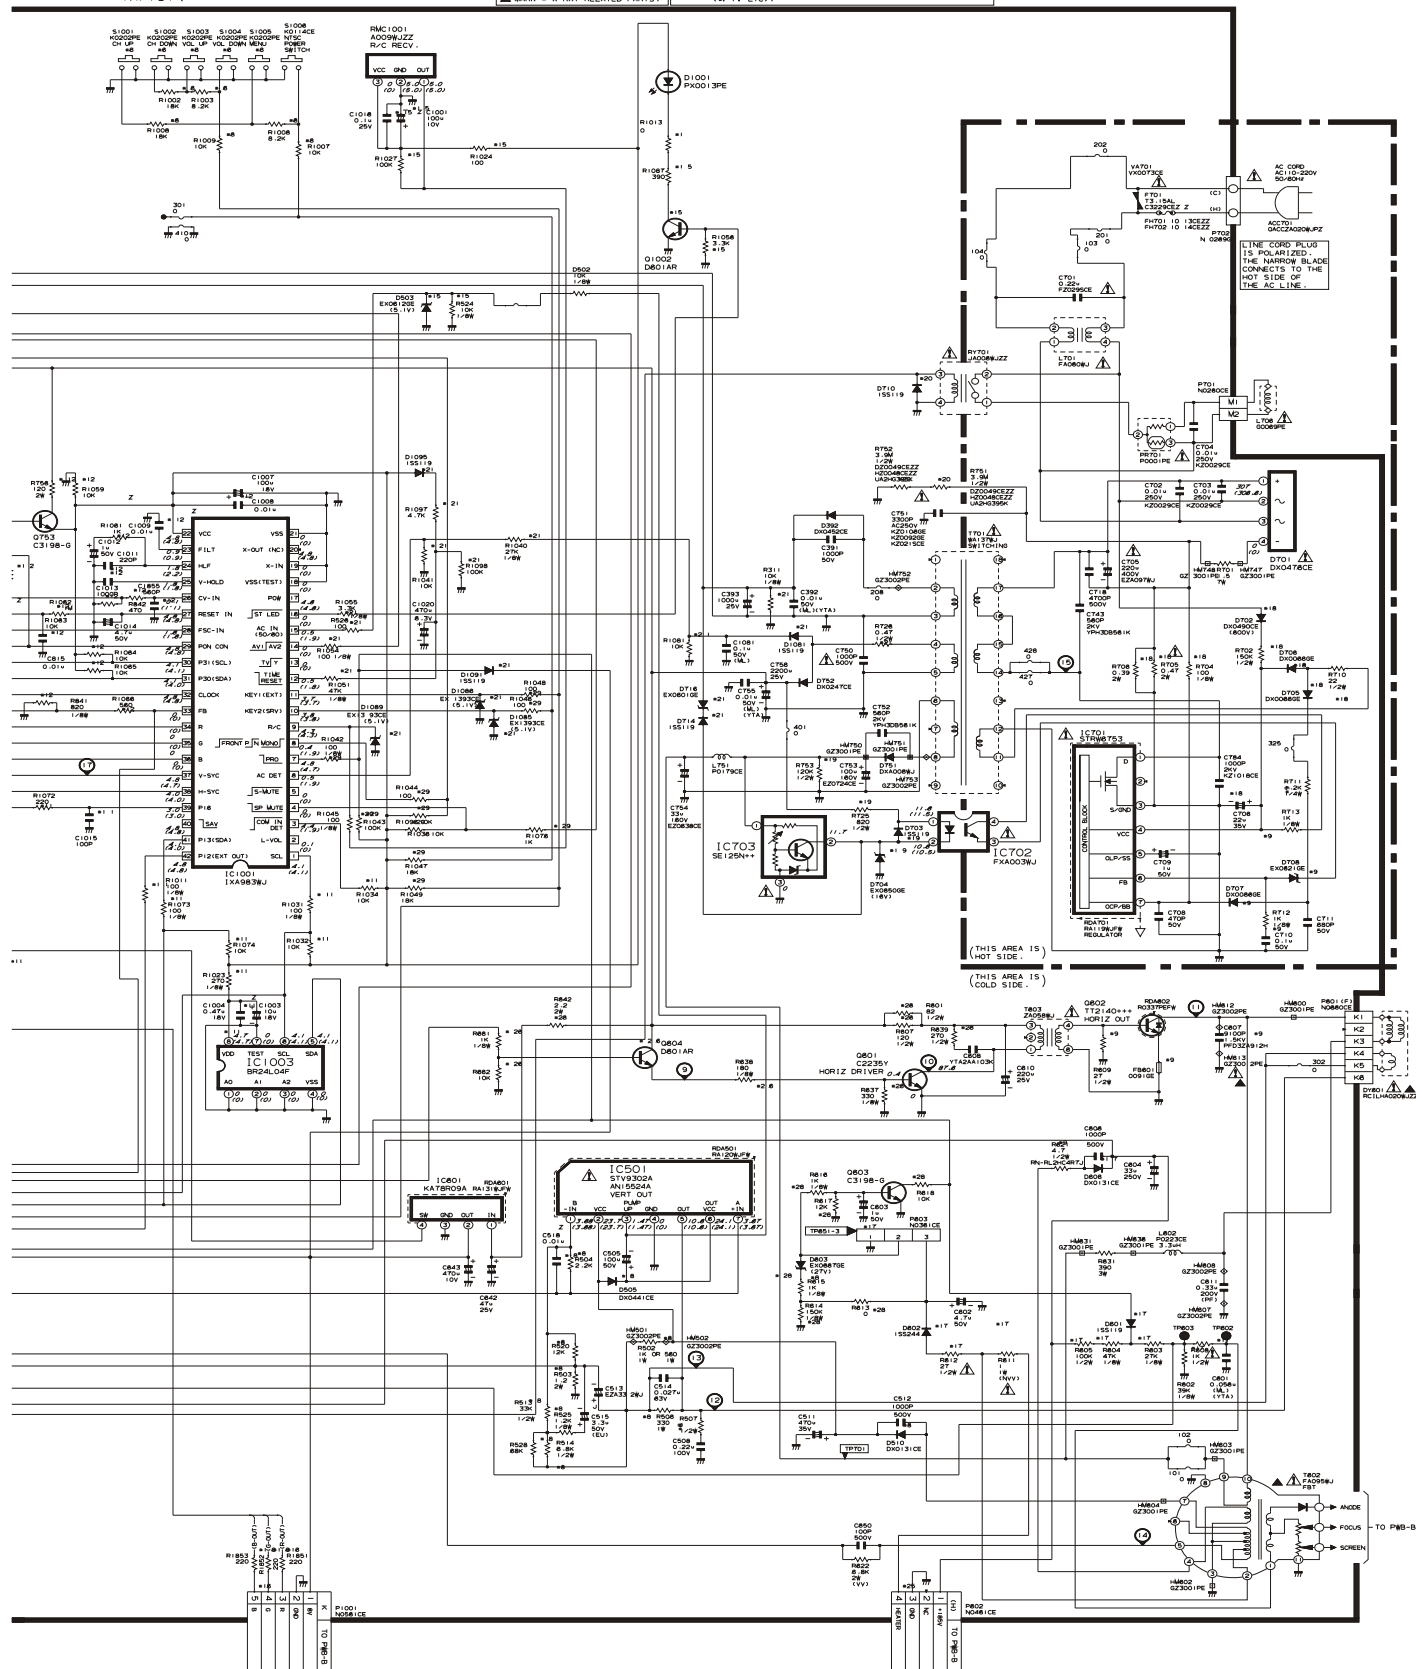



10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----

SCHEMATIC DIAGRAM: CRT Unit

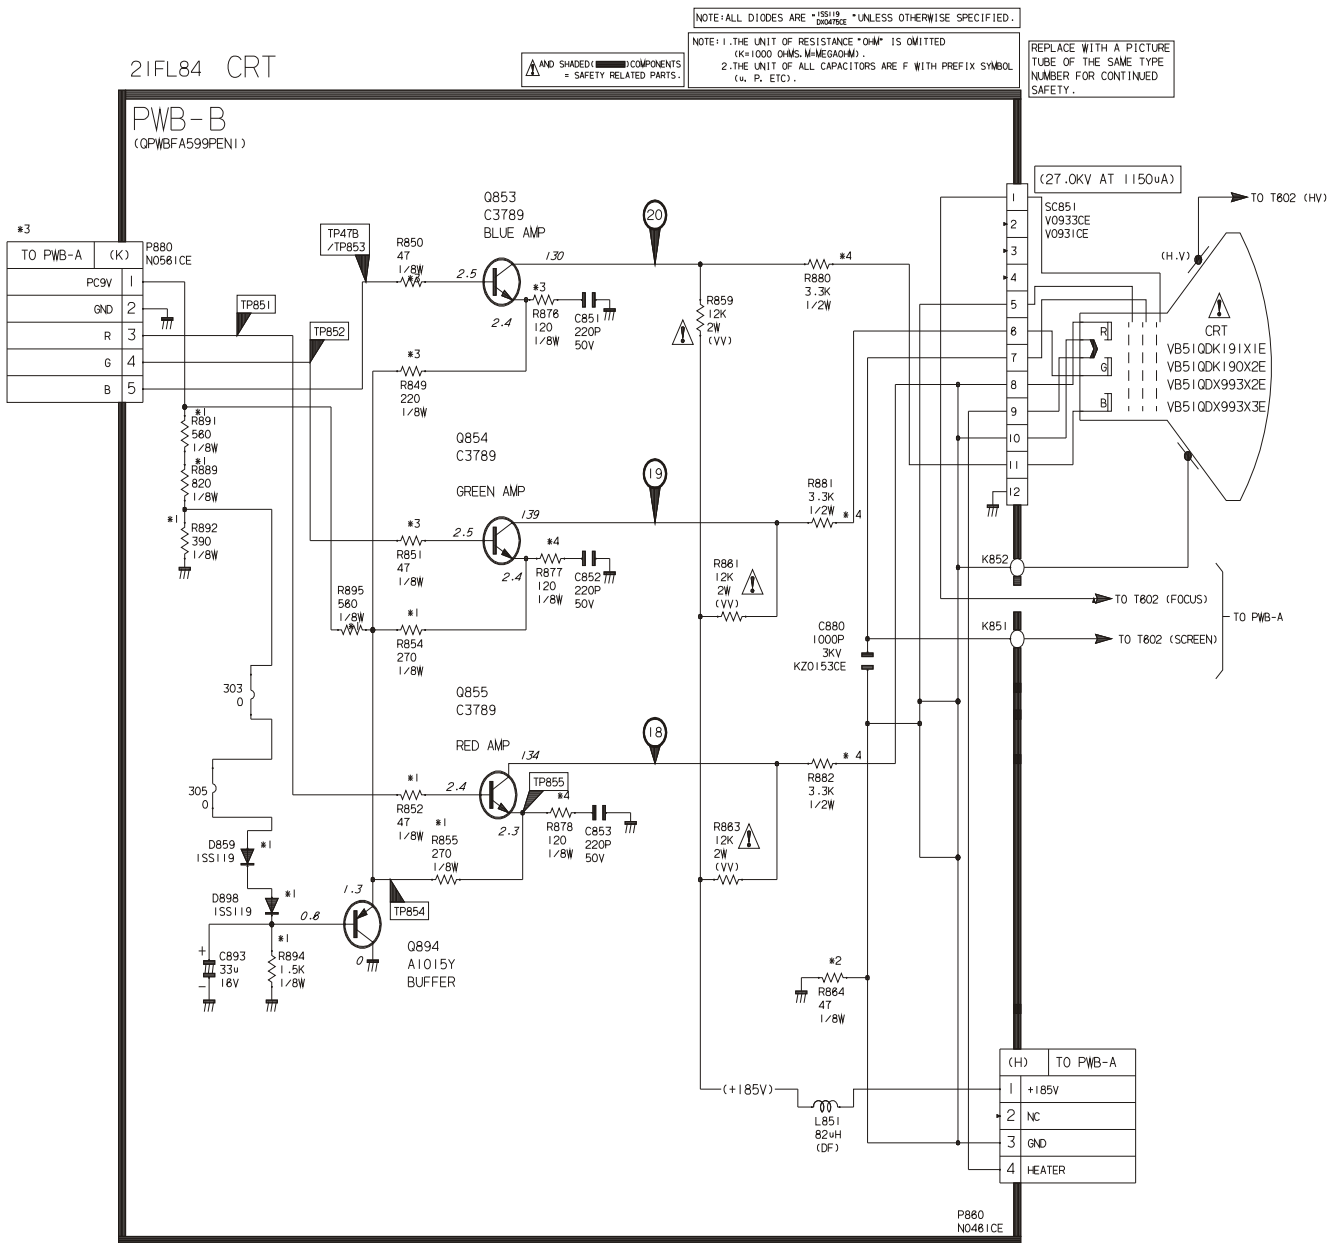

PRINTED WIRING BOARD ASSEMBLIES

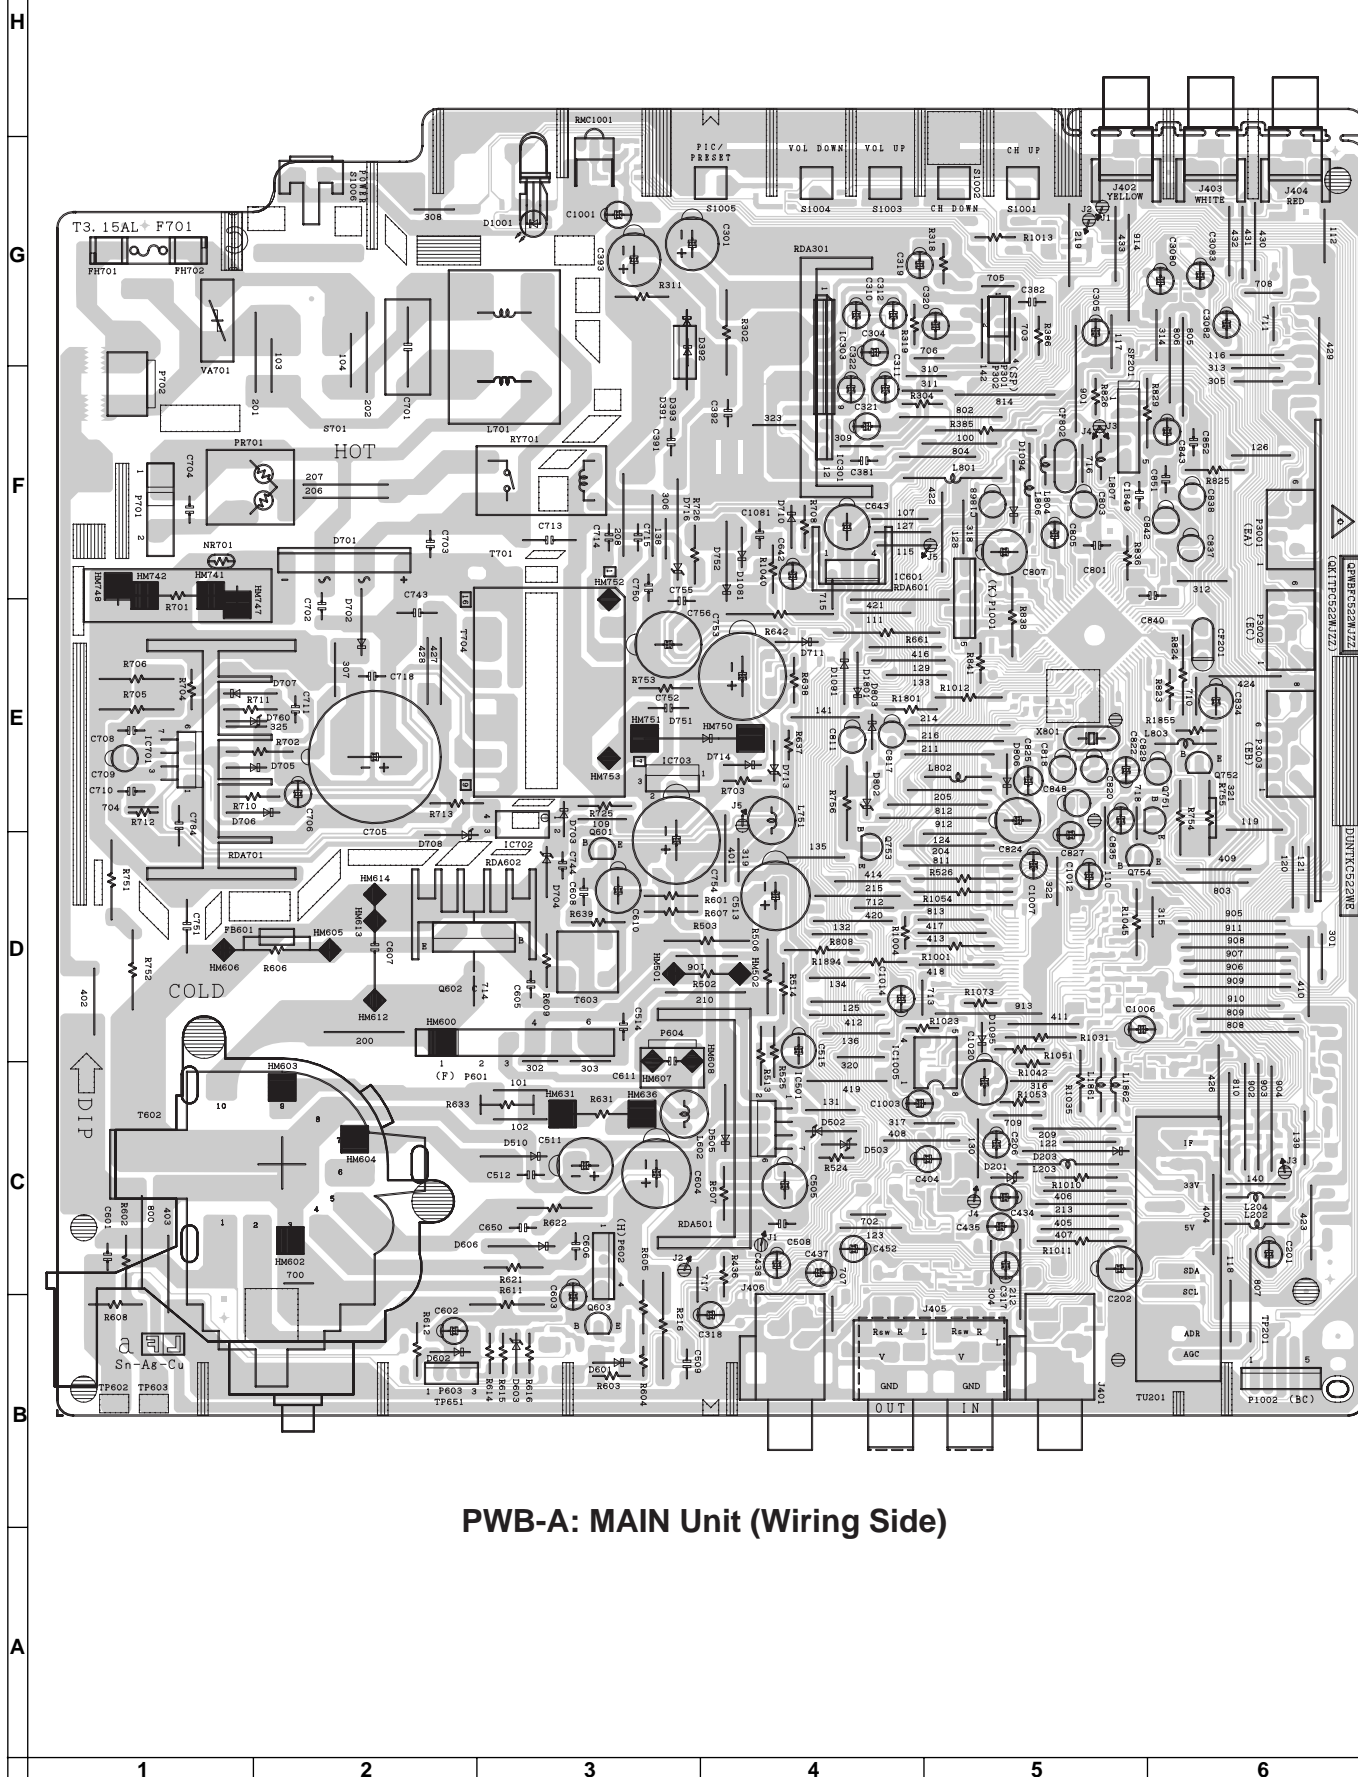

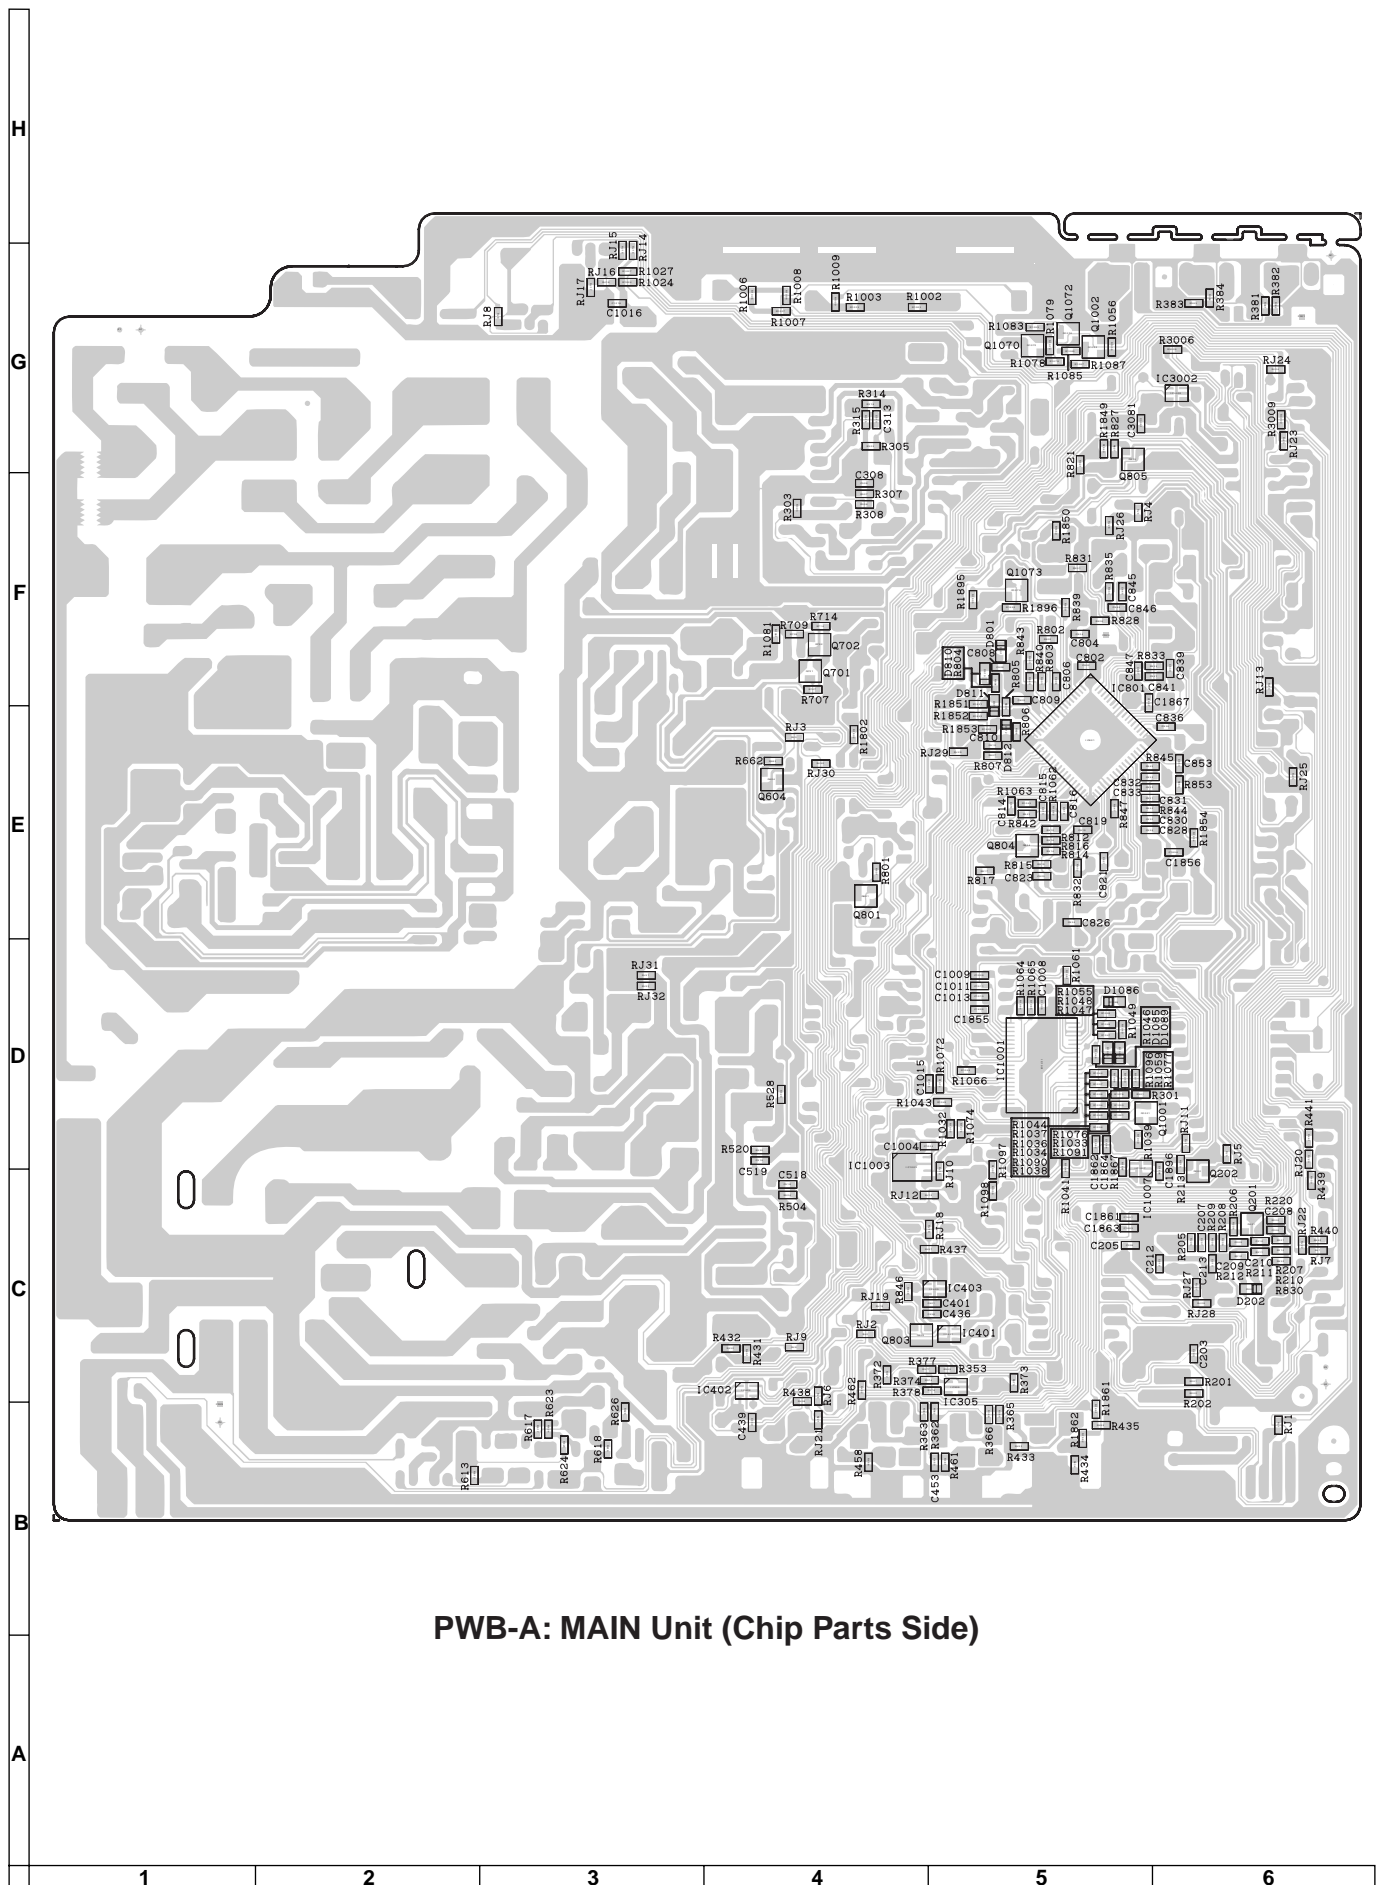

PWB-A: MAIN Unit (Chip Parts Side)

H

G

F


E

D

C

B

A

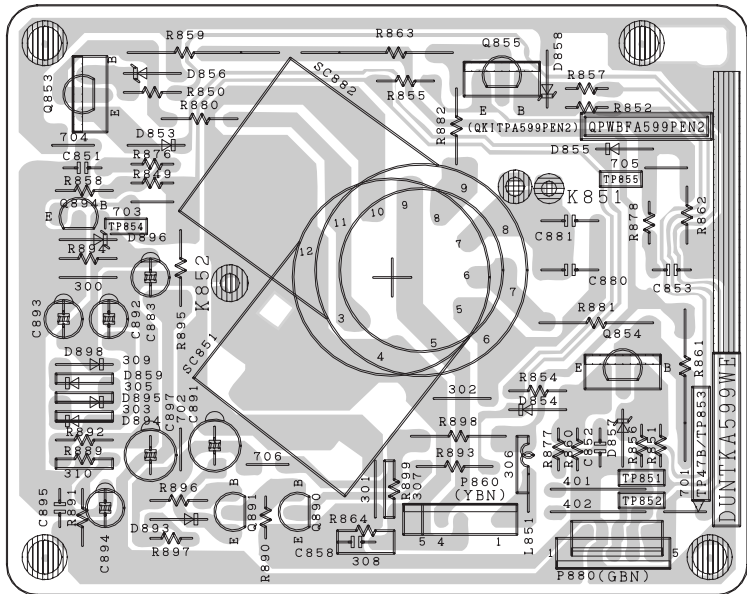

PWB-B: CRT Unit (Wiring Side)

1

2

3

4

5

6

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by Δ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does not have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO. |
| 3. PART NO. | 4. DESCRIPTION |

in **USA**: Contact your nearest SHARP Parts Distributor to order.
For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

Δ MARK: SPARE PARTS-DELIVERY SECTION

Δ MARK: X-RAY RELATED PARTS

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PICTURE TUBE

Δ Δ L706	VB51QDK191X1E	X	Picture Tube	CA
	RCILG0069PEZZ	X	Degaussing Coil	AL
	QEARCA012WJZZ	X	Grounding Strap	AE

With CRT Combination

Alt.	CRT		Description & Destination
1	VB51QDK191X1E	—	ORION CHI/PER
2	VB51QDK190X2E	—	ORION MX/COL
3	VB51QDX993X3E	—	Samsung (CHI/PERU)
4	VB51QDX993X2E	—	Samsung (MEX/COL)

PRINTED WIRING BOARD ASSEMBLIES

(NOT REPLACEMENT ITEM)

PWB-A	DUNTKC522WEA2	—	MAIN Unit	—
PWB-B	DUNTKA599WED5	—	CRT Unit	—

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PWB-A: DUNTKC522WEA2

MAIN UNIT

TUNER

NOTE: THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDENTLY

Δ TU201	VTUVT1T5UF202	X	Tuner	AS
INTEGRATED CIRCUITS				
IC301	VHIAN7523++-1	X	AN7523++	AF
IC402	VHIMM1501XN-1Y	X	MM1501XN	AD
Δ IC501	VHISTV9302A-1	X	STV9302A	AF
IC601	VHIKA78R09AP1	X	KIA78R09API	AE
Δ IC701	VHISTRW6753-1	X	STR-W6753	AL
Δ IC702	RH-FXA003WJZZ	X	PC123Y82	AC
Δ IC703	VHISE125N++-F	X	SE125N	AF
IC801	VHIM61250CF1EQ	X	M61250BFP-R71T	AQ
IC1001	RH-IXA983WJZZ	X	RU3AMLF-C4	AN
IC1003	VHIBR24L04F-1Y	X	BR24L04F-WE2	AD
IC3002	VHIMM1501XN-1Y	X	MM1501XN	AD

TRANSISTORS

Q201	VS2SC2735//1EY	X	2SC2735	AB
Q601	VS2SC2235Y/1E+	X	2SC2235-Y	AE
Q602	VSTT2140+++F	X	TT2140LS	AF
Q603	VS2SC3198-G-1+	X	2SC3198-G	AB
Q604	VS2SD601AR/-1Y	X	2SD601AR	AA
Q751	VS2SD468-C/-1+	X	2SD468ACTZ	AB
Q752	VS2SD468-C/-1+	X	2SD468ACTZ	AB
Q753	VS2SC3198-G-1+	X	2SC3198-G	AB
Q754	VS2SD468-C/-1+	X	2SD468ACTZ	AB
Q801	VS2SD601AR/-1Y	X	2SD601AR	AA
Q804	VS2SB709AR/-1Y	X	2SB709AR	AA
Q805	VS2SD601AR/-1Y	X	2SD601AR	AA
Q853	VS2SC3789//2E	X	2SC3789	AD
Q1002	VS2SD601AR/-1Y	X	2SD601AR	AA
Q1073	VS2SD601AR/-1Y	X	2SD601AR	AA

DIODES

D201	RH-EX0676GEZZY	X	Zener Diode	32V	AB
D203	VHD1SS119//1Y	X	Diode		AA
D392	RH-DX0452CEZZ	X	Diode		AF
D502	VRD-RA2BE103JY	X	10k 1/8W Carbon		AA
D503	RH-EX0612GEZZY	X	EX0612GE		AB
D505	RH-DX0441CEZZY	X	Diode		AA
D510	RH-DX0131CEZZY	X	Diode		AB
D601	VHD1SS119//1Y	X	Diode		AA
D602	VHD1SS244//1Y	X	Diode		AA
D603	RH-EX0667GEZZY	X	Zener Diode	27V	AB
D606	RH-DX0131CEZZY	X	Diode		AB
Δ D701	RH-DX0476CEZZ	X	Diode		AE
D702	RH-DX0490CEZZY	X	Diode		AB
D703	VHD1SS119//1Y	X	Diode		AA
D704	RH-EX0650GEZZY	X	Zener Diode	16V	AB
D705	RH-DX0066GEZZY	X	Diode		AC
D706	RH-DX0066GEZZY	X	Diode		AC
D707	RH-DX0066GEZZY	X	Diode		AC
D708	RH-EX0621GEZZY	X	Zener		AB
D710	VHD1SS119//1Y	X	Diode		AA
D714	VHD1SS119//1Y	X	Diode		AA
D716	RH-EX0601GEZZY	X	Zener Diode,	3.7V	AB
D751	RH-DXA006WJZZ	X	Diode		AC
D752	RH-DX0247CEZZ	X	Diode		AC
D801	RH-EX1393CEZZY	X	EX1393CE		AB
D802	RH-EX0630GEZZY	X	Zener Diode	9.1V	AB
D803	VHD1SS119//1Y	X	Diode		AA
D806	VHD1SS119//1Y	X	Diode		AA
D810	RH-EX0263TAZZY	X	EX0263TA		AB
D811	RH-EX0263TAZZY	X	EX0263TA		AB
D812	RH-EX0263TAZZY	X	EX0263TA		AB
D1001	RH-PX0013PEZZ	X	LED, ON TIMER		AB

Ref. No. Part No. ★ Description Code

PWB-A: DUNTKC522WEA2 MAIN UNIT

DIODES

D1081	VHD1SS119//1Y	X	Diode	AA
D1085	RH-EX1393CEZZY	X	EX1393CE	AB
D1086	RH-EX1393CEZZY	X	EX1393CE	AB
D1089	RH-EX1393CEZZY	X	EX1393CE	AB
D1091	VHD1SS119//1Y	X	Diode	AA
D1094	VHD1SS119//1Y	X	Diode	AA
D1095	VHD1SS119//1Y	X	Diode	AA
D1801	VHD1SS119//1Y	X	Diode	AA
VA701	RH-VX0073CEZZ	X	Varistor	AC

PACKAGED CIRCUITS

△ PR701	RMPTP0001PEZZ	X	Packaged Circuit	AG
△ R751	RR-DZ0049CEZZY	X	3.9M 1/2W Solid	AB
△ R752	RR-DZ0049CEZZY	X	3.9M 1/2W Solid	AB
X801	RCRSAA009WJZZ	X	Crystal,	AD

FILTERS

CF201	RFILC0447CEZZ	X	Filter,FiLC0447CE	AC
CF802	RFILC0446CEZZ	X	Filter,FiLC0446CE	AC
SF201	RFILC0405CEZZ	X	Filter (4.5MHZ)	AF

COILS

L203	VP-DF270K0000Y	X	Peaking,27mH	AA
L204	VP-XF1R2K0000Y	X	Peaking,1.2mH	AA
L602	RCILP0223CEZZ	X	Coil,	AB
L701	RCILFA060WJZZ	X	Coil Line Filter	AE
L751	RCILP0179CEZZ+	X	Coil	AB
L801	VP-DF100K0000Y	X	Peaking,10mH	AA
L802	VP-DF100K0000Y	X	Peaking,10mH	AA
L803	VP-DF100K0000Y	X	Peaking,10mH	AA
L804	VP-XF150K0000Y	X	Peaking,15mH	AA
L806	VP-DF100K0000Y	X	Peaking,10mH	AA
L807	VP-XF1R2K0000Y	X	Peaking,1.2mH	AA

TRANSFORMERS

△ T602	RTRNFA095WJZZ	X	H-Volt Transformer	AV
△ T603	RTRNZA058WJZZ	X	Transformer	AD
△ T701	RTRNWA137WJZZ	X	Transformer	AH

CAPACITORS

[EL... Electrolytic, M-Poly... Metalized Polypro Film]

C201	VCEA0A1CW476M+	X	47 16V	EL.	AA
C202	VCEA0A0JW108M+	X	1000 6.3V	EL.	AB
C203	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C205	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C206	VCEA0A1HW106M+	X	10 50V	EL.	AA
C207	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C208	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C209	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C210	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C213	VCKYCY1HB102KY	X	1000p 50V	Ceramic	AA
C301	VCEA0A1CW477M+	X	470 16V	EL.	AB
C304	VCEA0A1CW106M+	X	10 16V	EL.	AA
C305	QJUM-0001AJFWY	X	Jumper Wire		AA
C310	VCEA0A1HW105M+	X	1 50V	EL.	AA
C312	VCEA0A1HW224M+	X	0.22 50V	EL.	AA
C313	VCKYCY1HB822KY	X	8200p 50V	Ceramic	AA
C317	VCE9GA1CW106M+	X	10 16V	EL.	AB
C318	VCEA0A1CW107M+	X	100 16V	EL.	AA
C322	VCEA0A1HW105M+	X	1 50V	EL.	AA
C391	VCKYPA1HB102K+	X	1000p 50V	Ceramic	AA
C392	VCQYTA1HM103J+	X	0.01 50V	Mylar	AA
C393	VCEA0A1EW108M+	X	1000 25V	EL.	AC
C435	VCE9GA1CW106M+	X	10 16V	EL.	AB
C437	VCE9GA1HW106M+	X	10 50V	EL.	AC
C438	VCEA0A1CW106M+	X	10 16V	EL.	AA
C439	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C452	VCE9GA1CW106M+	X	10 16V	EL.	AB

Ref. No. Part No. ★ Description Code

C505	VCEA0A1HW107M+	X	100 50V	EL.	AB
C508	VCIFYAA2AA224J+	X	0.22 100V	M-Poly.	AC
C511	VCEA0A1VW477M	X	470 35V	EL.	AC
C512	VCKYPA2HB102K+	X	1000p 500V	Ceramic	AA
C513	RC-EZA332WJZZ+	X	1000 35V	EL.	AC
C514	VCFYSA1JB273J+	X	0.027 63V	M-Poly.	AB
C515	VCEACA1HC335J+	X	3.3 50V	EL.	AC
C518	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C601	VCQYTA1HM563J+	X	0.056 50V	Mylar	AA
C602	VCEA0A1HW475M+	X	4.7 50V	EL.	AA
C603	VCEA0A1HW105M+	X	1 50V	EL.	AA
C604	VCEA0A2EW336M+	X	33 250V	EL.	AD
C606	VCKYPA2HB102K+	X	1000p 500V	Ceramic	AA
△ C607	VCFPVC3ZA912H	X	9100p 1800 V	M.Poly.	AC
C608	VCQYTA2AA103K+	X	10000p 100V	Mylar	AB
C610	VCEA0A1EW227M+	X	220 25V	EL.	AB
C611	VCFPVC2DB334J	X	0.33 250V	M-Poly.	AC
C642	VCEA0A1EW476M+	X	47 25V	EL.	AA
C643	VCEA0A1AW477M+	X	470 10V	EL.	AB
C650	VCKYPA2HB101K+	X	100p 500V	Ceramic	AA
△ C701	RC-FZ029SCEZZ	X	0.22 250V	Ceramic	AC
C702	RC-KZ0029CEZZ+	X	0.01 AC250V	Ceramic	AB
C703	RC-KZ0029CEZZ+	X	0.01 AC250V	Ceramic	AB
C704	RC-KZ0029CEZZ+	X	0.01 AC250V	Ceramic	AB
△ C705	RC-EZA097WJZZ	X	220 400V	EL.	AK
C706	VCEA0A1VW226M+	X	22 35V	EL.	AA
C708	VCKYPA1HB471K+	X	470p 50V	Ceramic	AA
C709	VCEA9M1HW105M+	X	1 50V	EL.	AA
C710	VCIFYFA1HA104J+	X	0.1 50V	M-Poly.	AB
C711	VCKYPA1HB681K+	X	680p 50V	Ceramic	AA
C718	VCKYPA2HB472K+	X	4700p 500V	Ceramic	AB
C743	VCKYPH3DB561K	X	560p 2kV	Ceramic	AB
C750	VCKYPA2HB102K+	X	1000p 500V	Ceramic	AA
C751	RC-KZ0106GEZZ	X	3300p AC250V	Ceramic	AC
C752	VCKYPH3DB561K	X	560p 2kV	Ceramic	AB
C753	RC-EZ0724CEZZ	X	100 160V	EL.	AD
C754	RC-EZ0638CEZZ	X	33 160V	EL.	AD
C755	VCQYTA1HM103J+	X	0.01 50V	Mylar	AA
C756	VCEA0A1EW228M+	X	2200 25V	EL.	AD
C757	VCKYPA1HB471K+	X	470p 50V	Ceramic	AA
C784	RC-KZ1018CEZZ+	X	1000p 2kV	Ceramic	AC
C801	VCIFYFA1HA105J+	X	1 50V	M-Poly.	AC
C802	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C803	VCEA9M1CW476M+	X	47 16V	EL.	AB
C804	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C805	VCEA0A1HW105M+	X	1 50V	EL.	AA
C806	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C807	VCEA0A1CW337M+	X	330 16V	EL.	AB
C808	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C809	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C810	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C811	VCEA9M1CW106M+	X	10 16V	EL.	AA
C814	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C815	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C816	VCKYCY1EF104ZY	X	0.1 25V	Ceramic	AA
C817	VCEA9M1CW107M+	X	100 16 V	EL.	AB
C818	VCEA9M1HW475M+	X	4.7 50V	EL.	AA
C819	VCCCCY1HH121JY	X	120p 50 V	Ceramic	AA
C820	VCEA9M1HW474M+	X	0.47 50V	EL.	AA
C821	VCKYCY1HF153ZY	X	0.015 50V	Ceramic	AA
C822	VCE9GA1HW105M+	X	1 50V	EL.	AB
C823	VCKYCY1EF104ZY	X	0.1 25V	Ceramic	AA
C824	VCEA0A1CW337M+	X	330 16V	EL.	AB
C825	VCE9GA1HW105M+	X	1 50V	EL.	AB
C826	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C827	VCEA0A1CW476M+	X	47 16V	EL.	AA
C828	VCKYCY1HF103ZY	X	0.01 50V	Ceramic	AA
C829	VCEA9M1CW476M+	X	47 16V	EL.	AB
C831	VCKYCY1CF224ZY	X	0.22 16V	Ceramic	AA

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PWB-A: DUNTKC522WEA2

MAIN UNIT

CAPACITORS

[EL... Electrolytic, M-Poly... Metalized Polypro Film]

C833	VCKYCY1CF224ZY	X	0.22	16V	Ceramic	AA
C834	VCEA0A1CW107M+	X	100	16V	EL.	AA
C835	VCEA0A1CW106M+	X	10	16V	EL.	AA
C836	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C837	VCEA9M1HW105M+	X	1	50V	EL.	AA
C838	VCEA9M1CW106M+	X	10	16V	EL.	AA
C839	VCKYCY1HB332KY	X	3300p	50V	Ceramic	AA
C840	VCYFA1HA105J+	X	1	50V	M-Poly.	AC
C841	VCCCCY1HH101JY	X	100p	50V	Ceramic	AA
C842	VCEA9M1HW474M+	X	0.47	50V	EL.	AA
C843	VCEA0A1HW105M+	X	1	50V	EL.	AA
C845	VCKYCY1CF224ZY	X	0.22	16V	Ceramic	AA
C846	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C847	VCCCCY1HH220JY	X	22p	50V	Ceramic	AA
C848	VCEA9M1HW105M+	X	1	50V	EL.	AA
C1001	VCEA0A1AW107M+	X	100	10V	EL.	AA
C1003	VCEA0A1CW106M+	X	10	16V	EL.	AA
C1004	VCKYCY1CF474ZY	X	0.47	16V	Ceramic	AA
C1007	VCEA0A1CW107M+	X	100	16V	EL.	AA
C1008	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C1009	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C1011	VCKYCY1HB221KY	X	220p	50V	Ceramic	AA
C1012	VCEA0A1HW105M+	X	1	50V	EL.	AA
C1013	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
C1014	VCE9GA1HW475M+	X	4.7	50V	EL.	AB
C1015	VCCCCY1HH101JY	X	100p	50V	Ceramic	AA
C1016	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
C1020	VCEA0A0JW477M+	X	470	6.3V	EL.	AB
C1081	VCQYTA1HM104J+	X	0.1	50V	Mylar	AB
C1849	VCYFA1HA223J+	X	0.022	50V	Mylar	AB
C1855	VCKYCY1HB561KY	X	560p	50V	Ceramic	AA
C1856	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
C1862	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
C1864	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
C1868	VCEA9M1CW336M+	X	33	16V	EL.	AA
C3080	VCEA0A1CW107M+	X	100	16V	EL.	AA
C3081	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
C3082	VCEA0A1CW106M+	X	10	16V	EL.	AA
C3083	VCEA0A1CW106M+	X	10	16V	EL.	AA

RESISTORS

[M-Ox... Metal Oxide, M-Film ... Metal Film]

RJ1	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ3	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ5	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ9	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ10	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ12	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ13	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ14	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ17	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ18	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ19	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ20	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ25	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ26	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ29	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ30	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
R201	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R202	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R205	VRS-CY1JF680JY	X	68	1/16W	M-Ox.	AA
R206	VRS-CY1JF122JY	X	1.2k	1/16W	M-Ox.	AA
R207	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

R208	VRS-CY1JF331JY	X	330	1/16W	M-Ox.	AA
R209	VRS-CY1JF392JY	X	3.9k	1/16W	M-Ox.	AA
R216	VRS-RG3LB333J+	X	33k	3.0W	M-Ox.	AB
R220	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R301	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R302	VRN-RL3DBR10J+	X	0.10	2W	M-Film	AB
R303	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R304	VRD-RA2BE683JY	X	68k	1/8W	Carbon	AA
R305	VRS-CY1JF274JY	X	270k	1/16W	M-Ox.	AA
R311	VRD-RA2BE103JY	X	10k	1/8W	Carbon	AA
R314	VRS-CY1JF122JY	X	1.2k	1/16W	M-Ox.	AA
R315	VRS-CY1JF222JY	X	2.2k	1/16W	M-Ox.	AA
R365	VRS-CY1JF564JY	X	560k	1/16W	M-Ox.	AA
R366	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R383	VRS-CY1JF564JY	X	560k	1/16W	M-Ox.	AA
R384	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R431	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R432	VRS-CY1JF750JY	X	75	1/16W	M-Ox.	AA
R436	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R438	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
R461	VRS-CY1JF750JY	X	75	1/16W	M-Ox.	AA
R462	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R502	VRS-RG3AB102J+	X	1k	1W	M-Ox.	AB
R503	VRN-RL3DB1R2J+	X	1.2	2W	M-Film	AB
R504	VRS-CY1JF222JY	X	2.2k	1/16W	M-Ox.	AA
R506	VRS-RG3AB331J+	X	330	1W	M-Ox.	AB
R507	VRD-RM2HD1R0JY	X	1	1/2W	Carbon	AA
R513	VRD-RM2HD333JY	X	33k	1/2W	Carbon	AA
R514	VRD-RM2HD682JY	X	6.8k	1/2W	Carbon	AA
R520	VRS-CY1JF123JY	X	12k	1/16W	M-Ox.	AA
R524	VRD-RA2BE103JY	X	10k	1/8W	Carbon	AA
R525	VRD-RA2BE122JY	X	1.2k	1/8W	Carbon	AA
R526	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R528	VRS-CY1JF683JY	X	68k	1/16W	M-Ox.	AA
R601	VRD-RM2HD820JY	X	82	1/2W	Carbon	AA
R602	VRD-RA2BE393JY	X	39k	1/8W	Carbon	AA
R603	VRD-RA2BE273JY	X	27k	1/8W	Carbon	AA
R604	VRD-RA2BE473JY	X	47k	1/8W	Carbon	AA
R605	VRD-RM2HD104JY	X	100k	1/2W	Carbon	AA
R607	VRD-RM2HD121JY	X	120	1/2W	Carbon	AA
△ R608	VRD-RM2HD102JY	X	1.0k	1/2W	Carbon	AA
R609	VRD-RM2HD270JY	X	27	1/2W	Carbon	AA
△ R611	VRN-RL3AB1R0J+	X	1.0	1W	M-Film	AB
△ R612	VRD-RM2HD270JY	X	27	1/2W	Carbon	AA
R613	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
R614	VRD-RA2BE154JY	X	150k	1/8W	Carbon	AA
R615	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R616	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R617	VRS-CY1JF123JY	X	12k	1/16W	M-Ox.	AA
R618	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R621	VRN-RL2HC4R7J+	X	4.7	1/2W	M-Film	AB
R622	VRS-VV3DB682J	X	6.8k	2W	M-Ox.	AA
R631	VRS-KT3LB391J	X	390	3W	M-Ox.	AD
R637	VRD-RA2BE331JY	X	330	1/8W	Carbon	AA
R638	VRD-RA2BE181JY	X	180	1/8W	Carbon	AA
R639	VRD-RM2HD271JY	X	270	1/2W	Carbon	AA
R642	VRN-RL3DB2R2J+	X	2.2	2W	M-Film	AB
R661	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R662	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R701	VRW-KQ3NC1R5K	X	1.5	7W	Cement	AC
R702	VRD-RM2HD154JY	X	150k	1/2W	Carbon	AA
R704	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
△ R705	VRN-RL3DBR47J+	X	0.47	2W	M-Film	AB
△ R706	VRN-RL3DBR39J+	X	0.39	2W	M-Film	AB
R710	VRD-RM2HD220JY	X	22	1/2W	Carbon	AA
R711	VRD-RA2EE122JY	X	1.2k	1/4W	Carbon	AA
R712	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R713	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R725	VRD-RM2HD821JY	X	820	1/2W	Carbon	AA

Ref. No. Part No. ★ Description Code

PWB-A: DUNTKC522WEA2 MAIN UNIT

RESISTORS

[M-Ox. --- Metal Oxide, M-Film --- Metal Film]

R726	VRN-RL2HCR47J+	X	0.47	1/2W	M-Film	AB
R753	VRD-RM2HD124JY	X	120k	1/2W	Carbon	AA
R754	VRN-RL3AB8R2J+	X	8.2	1W	M-Film	AB
R756	VRS-RG3DB121J+	X	120	2W	M-Ox.	AB
R801	VRS-CY1JF561JY	X	560	1/16W	M-Ox.	AA
R802	VRS-CY1JF682JY	X	6.8k	1/16W	M-Ox.	AA
R803	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R804	VRS-CY1JF222JY	X	2.2k	1/16W	M-Ox.	AA
R805	VRS-CY1JF222JY	X	2.2k	1/16W	M-Ox.	AA
R806	VRS-CY1JF222JY	X	2.2k	1/16W	M-Ox.	AA
R807	VRS-CY1JF222JY	X	2.2k	1/16W	M-Ox.	AA
R808	VRD-RA2BE273JY	X	27k	1/8W	Carbon	AA
R812	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R814	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R815	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R816	VRS-CY1JF223JY	X	22k	1/16W	M-Ox.	AA
R817	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R823	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R824	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R825	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R827	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R828	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA
R829	VRD-RA2BE472JY	X	4.7k	1/8W	Carbon	AA
R830	VRS-CY1JF393JY	X	39k	1/16W	M-Ox.	AA
R831	VRS-CY1JF271JY	X	270	1/16W	M-Ox.	AA
R832	VRS-CY1JF822JY	X	8.2k	1/16W	M-Ox.	AA
R833	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R835	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R836	VRD-RA2BE470JY	X	47	1/8W	Carbon	AA
R838	VRD-RA2BE105JY	X	1 M	1/8W	Carbon	AA
R839	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R840	VRS-CY1JF124JY	X	120k	1/16W	M-Ox.	AA
R841	VRD-RA2BE821JY	X	820	1/8W	Carbon	AA
R842	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA
R843	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R847	VRS-CY1JF475JY	X	4.7M	1/16W	M-Ox.	AA
R1002	VRS-CY1JF183JY	X	18k	1/16W	M-Ox.	AA
R1003	VRS-CY1JF822JY	X	8.2k	1/16W	M-Ox.	AA
R1006	VRS-CY1JF822JY	X	8.2k	1/16W	M-Ox.	AA
R1007	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1008	VRS-CY1JF183JY	X	18k	1/16W	M-Ox.	AA
R1009	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1011	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R1012	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R1013	QJUM-0001AJFWY	X			Jumper Wire	AA
R1023	VRD-RA2BE271JY	X	270	1/8W	Carbon	AA
R1024	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1027	VRS-CY1JF104JY	X	100k	1/16W	M-Ox.	AA
R1031	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R1032	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1034	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1036	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1040	VRD-RA2BE273JY	X	27k	1/8W	Carbon	AA
R1041	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1042	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R1043	VRS-CY1JF104JY	X	100k	1/16W	M-Ox.	AA
R1044	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1045	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R1046	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1047	VRS-CY1JF183JY	X	18k	1/16W	M-Ox.	AA
R1048	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1049	VRS-CY1JF183JY	X	18k	1/16W	M-Ox.	AA

Ref. No. Part No. ★ Description Code

R1051	VRD-RA2BE473JY	X	47k	1/8W	Carbon	AA
R1054	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R1055	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1056	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1059	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1061	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R1062	VRS-CY1JF105JY	X	1M	1/16W	M-Ox.	AA
R1063	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1064	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1065	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1066	VRS-CY1JF561JY	X	560	1/16W	M-Ox.	AA
R1072	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R1073	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R1074	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1076	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R1081	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1087	VRS-CY1JF391JY	X	390	1/16W	M-Ox.	AA
R1096	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1097	VRS-CY1JF472JY	X	4.7k	1/16W	M-Ox.	AA
R1098	VRS-CY1JF104JY	X	100k	1/16W	M-Ox.	AA
R1801	VRD-RA2BE222JY	X	2.2k	1/8W	Carbon	AA
R1802	VRS-CY1JF124JY	X	120k	1/16W	M-Ox.	AA
R1849	VRS-CY1JF152JY	X	1.5k	1/16W	M-Ox.	AA
R1850	VRS-CY1JF472JY	X	4.7k	1/16W	M-Ox.	AA
R1851	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R1852	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R1853	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R1854	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R1855	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R1894	VRD-RA2BE103JY	X	10k	1/8W	Carbon	AA
R1895	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R1896	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R3006	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA

FERRITE BEAD

FB601	RBLN-0091GEZZY	X	Ferrite Bead	AA
-------	----------------	---	--------------	----

SWITCHES

S1001	QSW-K0202PEZZ+	X	Switch,	AB
S1002	QSW-K0202PEZZ+	X	Switch,	AB
S1003	QSW-K0202PEZZ+	X	Switch,	AB
S1004	QSW-K0202PEZZ+	X	Switch,	AB
S1005	QSW-K0202PEZZ+	X	Switch,	AB
S1006	QSW-K0114CEZZ	X	Switch,	AE

MISCELLANEOUS PARTS

△ F701	QFS-C3229CEZZ	X	Fuse,T3.14AL	AC
△ FH701	QFSDH1013CEZZ+	X	FUSE CLIP	AB
△ FH702	QFSDH1014CEZZ+	X	FUSE CLIP	AB
J402	QJAKE0108CEZZ	X	Jack,3Pin	AD
J403	QJAKE0183CEZZ	X	Jack,3Pin	AD
J405	QJAKF0074CEZZ	X	Jack, Rear AV-In	AE
P302	QPLGN0461CEZZA	X	plug, 4pin(S1-4)	AB
P601	QPLGN0660CEZZ	X	plug (6 PINS)	AC
P602	QPLGN0461CEZZA	X	plug, 4pin(S1-4)	AB
P603	QPLGN0361CEZZA	X	plug,3p (TP651-3)	AB
P701	QPLGN0260CEZZ	X	plug,2p (M1-2)	AB
P702	QPLGN0269GEZZ	X	plug,2p (P1-2)	AB
P1001	QPLGN0561CEZZA	X	plug 5Pin(KA)	AB
P1002	QPLGN0561CEZZ	X	plug (5 PINS)	AB
RDA301	PRDARA121WJFW	X	Heat Sink	AC
RDA501	PRDARA120WJFW	X	Heat Sink	AD
RDA601	PRDARA131WJFW	X	Heat Sink	AD
RDA602	PRDAR0337PEFW	X	Heat Sink	AC
RDA701	PRDARA119WJFW	X	Heat Sink	AE
RMC1001	RRMCUA009WJZZ	X	R/C Receiver	AE
△ RY701	RRLYJA006WJZZ	X	Relay	AE
	LHLDLP1066PE00	X	LED HOLDER	AB

Ref. No.	Part No.	★ Description	Code
----------	----------	---------------	------

PWB-B: DUNTKA599WED5 CRT UNIT

TRANSISTORS

Q854	VS2SC3789//2E	X	2SC3789	AD
Q855	VS2SC3789//2E	X	2SC3789	AD
Q894	VS2SA1015Y/1E+	X	2SA1015Y	AB

DIODES

D859	VHD1SS119//1Y	X	Diode	AA
D898	VHD1SS119//1Y	X	Diode	AA

FILTERS

L851	VP-MK820K0000+	X	Peaking, 82mH	AB
------	----------------	---	---------------	----

CAPACITORS

[EL... Electrolytic, M-Poly... Metalized Polypro Film]

C851	VCKYPA1HB221K+	X	220p 50V	Ceramic	AA
C852	VCKYPA1HB221K+	X	220p 50V	Ceramic	AA
C853	VCKYPA1HB221K+	X	220p 50V	Ceramic	AA
C880	RC-KZ0153CEZZ	X	1000p 3kV	Ceramic	AC
C893	VCEA0A1CW336M+	X	33 16V	EL.	AA

RESISTORS

[M-Ox... Metal Oxide, M-Film ... Metal Film]

R849	VRD-RA2BE221JY	X	220 1/8W	Carbon	AA
R850	VRD-RA2BE470JY	X	47 1/8W	Carbon	AA
R851	VRD-RA2BE470JY	X	47 1/8W	Carbon	AA
R852	VRD-RA2BE470JY	X	47 1/8W	Carbon	AA
R854	VRD-RA2BE271JY	X	270 1/8W	Carbon	AA
R855	VRD-RA2BE271JY	X	270 1/8W	Carbon	AA
R859	VRS-VV3DB123J	X	12k 2W	M-Ox.	AA
R861	VRS-VV3DB123J	X	12k 2W	M-Ox.	AA
R863	VRS-VV3DB123J	X	12k 2W	M-Ox.	AA
R864	VRD-RA2BE470JY	X	47 1/8W	Carbon	AA
R876	VRD-RA2BE121JY	X	120 1/8W	Carbon	AA
R877	VRD-RA2BE121JY	X	120 1/8W	Carbon	AA
R878	VRD-RA2BE121JY	X	120 1/8W	Carbon	AA
R880	VRD-RM2HD332JY	X	3.3k 1/2W	Carbon	AA
R881	VRD-RM2HD332JY	X	3.3k 1/2W	Carbon	AA
R882	VRD-RM2HD332JY	X	3.3k 1/2W	Carbon	AA
R889	VRD-RA2BE821JY	X	820 1/8W	Carbon	AA
R891	VRD-RA2BE561JY	X	560 1/8W	Carbon	AA
R892	VRD-RA2BE391JY	X	390 1/8W	Carbon	AA
R894	VRD-RA2BE152JY	X	1.5k 1/8W	Carbon	AA
R895	VRD-RA2BE561JY	X	560 1/8W	Carbon	AA

MISCELLANEOUS PARTS

P860	QPLGN0461CEZZ	X	plug (4 PINS)	AA
P880	QPLGN0561CEZZ	X	plug (5 PINS)	AB
SC851	QSOCV0933CEZZ	X	SOCKET (CRT)	AD

MISCELLANEOUS PARTS

ACC701	QACCZA020WJPZ	X	AC Cord	AG
SP301	VSP1205PB09WA	X	SPEAKER	AM
	LHLDK0014PEZZ	X	AC CORD HOLDER	AB
	QCNW-A871WJZZ	X	Wire (H) 5 pin	AD
	QCNW-A872WJZZ	X	Wire (K) 4 pin	AD
	QCNW-A873WJZZ	X	Wire (speaker)	AE

Ref. No.	Part No.	★ Description	Code
----------	----------	---------------	------

PACKING PARTS


SPAKCB492WJZZ	X	PACKING CASE	AU
SPAKPA125WJZZ	X	LAMIN FOAM	AG
SPAKXA145WJZZ	X	PACKING FOAM	AM
SSAKA0101GJZZ	X	Plastic Bag	AB
TLABM0005GJZZ	X	Model Label	AC
TLABZA714WJZZ	X	POP LABEL	AE

SUPPLIED ACCESORRIES


TINS-B272WJZZ	X	Operation manual	AF
RRMCGA257WJSA	X	Infrared R-C Unit	AM

CABINET PARTS

1	CCABAA659WEH1	X	Front Cabinet Ass'y	BF
1-1	Not Available	—	Front Cabinet	—
1-2	HBDGB3155CESA	X	BADGE	AE
1-3	HDECQA403WJSA	X	COVER (LED & R/C)	AL
1-4	JBTN-A070WJKD	X	BUTTON (POWER)	AE
1-5	MSPRC0005PEFW	X	SPRING	AA
1-6	GDORFA015WJKD	X	DOOR (20F640)	AF
1-7	MSPRPA012WJFW	X	SPRING (DOOR)	AB
1-8	HINDPA213WJSA	X	INDICATION PLATE	AD
1-9	GBFL-A007WJZZ	X	SPEAKER HOLDER	AE
2	GCABBA099WJKA	X	REAR CABINET	AZ

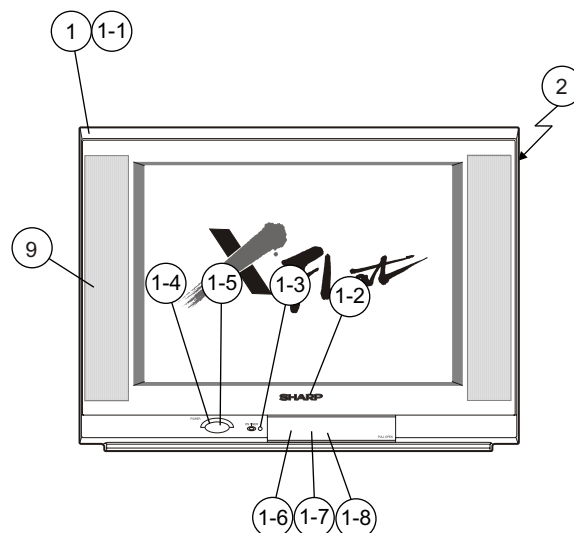

PACKING OF THE SET

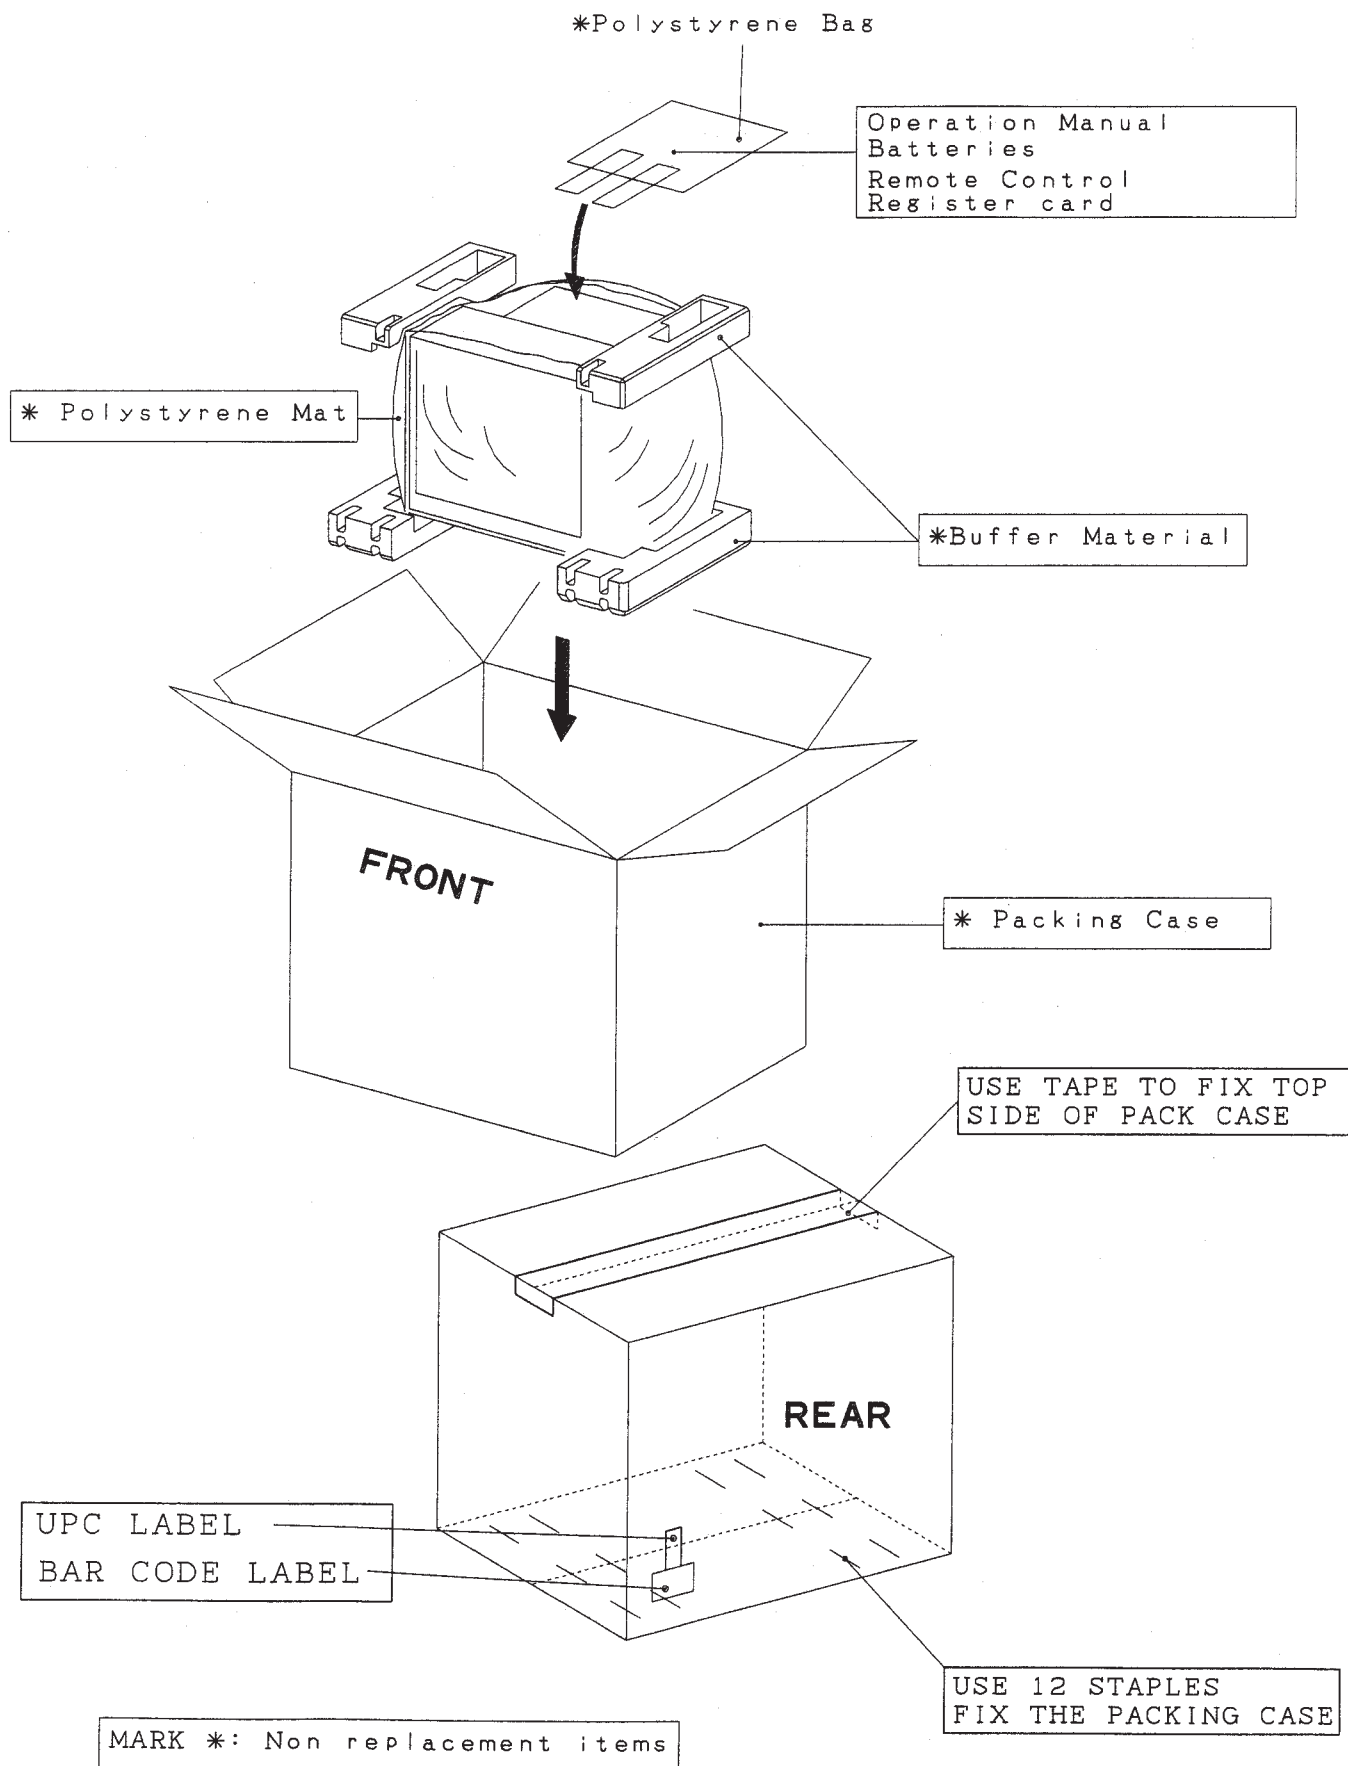

[illegible]

SHARP

COPYRIGHT © 2004 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

QRC0008-L
June. 2004
Modify : SEMEX

Design and Production Information	
Design	: SEM
Production	: SEMEX

J B

SHARP ELECTRONICA MEXICO S. A. DE C. V.
Quality & Reliability Control Center
Blvd. SHARP No. 3510 Parque Industrial Rosarito
Playas de Rosarito, México B. C. 22710